

REPLACEMENT PARTS FOR OIL-FIRED BOILERS

MODEL RAB

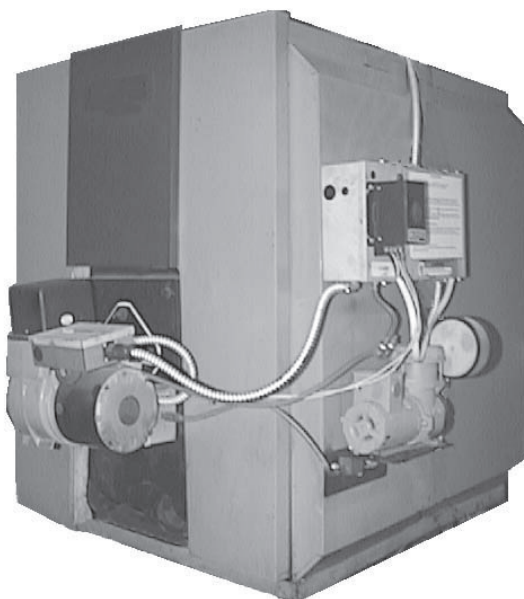


TABLE OF CONTENTS

RATING PLATE AND SERIAL NUMBER	2
OUTER PANELS, BOILER, AND LINER	3
DRAFT REGULATOR, DRAFT INDUCER, AND VENT CAP.....	3
FUEL PRE-HEATER SYSTEM.....	4
BURNER AND FUEL LINES	4
ELECTRICAL COMPONENTS	6
COMPRESSED AIR SYSTEM	7
REMOTE PUMP ASSEMBLY AND FUEL SUPPLY LINE COMPONENTS.....	8

NOTES:

- Used-oil heaters are not approved for sale in California.
- Effective 20 JAN 2006, unit size 500 was changed from a 230V system to a 120V system. The cartridge heater, air compressor, burner, and hour meter were affected. Select replacement parts carefully.
- Refer to the air compressor retrofit kit installation instructions to replace the air compressor on unit sizes 350 and 500. The replacement compressor (PN 1012072) must be ordered separately from the retrofit kit (PN 1021116).

IMPORTANT

- Always include complete model and serial number so that any specification change can be considered for parts replacement. It can save time and expense.
- In keeping with our policy of continuous product improvement, we reserve the right to alter any information shown here.
- Order by Part Number (PN) not by option designation.

WE RESERVE THE RIGHT TO SUBSTITUTE FUNCTIONAL REPLACEMENTS.

Rating Plate and Serial No.

REZNOR MERCER, PA. USA 16137 HOT WATER BOILER ETL CERTIFIED TO UL STANDARD 296A AND CSA B140.0.03 FOR INDUSTRIAL / COMMERCIAL USE ONLY FOR USE WITH INTEGRAL GROUP 1 OR 2 PRIMARY SAFETY CONTROLS. SUITABLE FOR NO. 2 FUEL OIL AND USED OIL RANGING FROM ATF TO SAE 50. MODEL [A] SERIAL NO. USE COPPER CONDUCTORS ONLY. [B] VOLTS [C] PHASE [D] HERTZ [E] AMPS * MINIMUM CIRCUIT AMPACITY [F] AMPS * MAXIMUM UNIT FUSE [G] AMPS FIRING RATE [H] G.P.H. INPUT RATE DEPENDS ON BTU CONTENT OF THE USED OIL. NOTE: THE FIRING RATE OF STRAIGHT NUMBER 2 OIL WILL BE 10% LESS MAXIMUM OVERFIRE PRESSURE [J] IN. W.C. FLUE OUTLET PRESSURE RANGE [K] IN. W.C. MINIMUM CLEARANCE TO COMBUSTIBLES FRONT - [L]; REAR - [M] SIDE WITH ELECTRIC BOX - [N] SIDE OPPOSITE ELECTRIC BOX - [O] FLUE - [P] REPLACEMENT NOZZLES MUST BE PURCHASED FROM REZNOR REFER TO THE INSTALLATION MANUAL FOR FURTHER INFORMATION. * DOES NOT INCLUDE FIELD INSTALLED WATER CIRCULATING PUMP.

Rating Plate Key:

- A** Model No.
B Volts
C Phase
D Hertz
E Amps
F Minimum Circuit Ampacity
G Maximum Unit Fuse
H Firing Rate (GPH)
I Input Rate (BTU/HR)
J Maximum Overfire Pressure (IN WC)
K Flue Outlet Pressure Range (IN WC)
L Front Clearance (inches)
M Rear Clearance (inches)
N Side with Electrical Box Clearance (inches)
O Side without Electrical Box Clearance (inches)
P Flue Pipe Clearance (inches)

Serial No. Key

Example: **AZA** **140** **B** **0000**



1 **2** **3** **4**

- 1 Date of Manufacture (refer to table below)
- 2 Size (BTUH Input)
- 3 Boiler Model
- 4 Consecutive Number for Manufacturing

Table 1. Serial Number Date Codes (Month and Year)


Year	Month											
	JAN	FEB	MAR	APR	MAY	JUN	JUL	AUG	SEP	OCT	NOV	DEC
1998	AXA	AXB	AXC	AXD	AXE	AXF	AXG	AXH	AXI	AXJ	AXK	AXL
1999	AYA	AYB	AYC	AYD	AYE	AYF	AYG	AYH	AYI	AYJ	AYK	AYL
2000	AZA	AZB	AZC	AZD	AZE	AZF	AZG	AZH	AZI	AZJ	AZK	AZL
2001	BAA	BAB	BAC	BAD	BAE	BAF	BAG	BAH	BAI	BAJ	BAK	BAL
2002	BBA	BBB	BBC	BBD	BBE	BBF	BBG	BBH	BBI	BBJ	BBK	BBL
2003	BCA	BCB	BCC	BCD	BCE	BCF	BCG	BCH	BCI	BCJ	BCK	BCL
2004	BDA	BDB	BDC	BDD	BDE	BDF	BDG	BDH	BDI	BDJ	BDK	BDL
2005	BEA	BEB	BEC	BED	BEE	BEF	BEG	BEH	BEI	BEJ	BEK	BEL
2006	BFA	BFB	BFC	BFD	BFE	BFF	BFG	BFH	BFI	BFJ	BFK	BFL
2007	BGA	BGB	BGC	BGD	BGE	BGF	BGG	BGH	BGI	BGJ	BGK	BGL
2008	BHA	BHB	BHC	BHD	BHE	BHF	BHG	BHH	BHI	BHJ	BHK	BHL
2009	BIA	BIB	BIC	BID	BIE	BIF	BIG	BIH	BII	BIJ	BIK	BIL
2010	BJA	BJB	BJC	BJD	BJE	BJF	BJG	BJH	BJI	BJJ	BJK	BJL
2011	BKA	BKB	BKC	BKD	BKE	BKF	BKG	BKH	BKI	BKJ	BKK	BKL
2012	BLA	BLB	BLC	BLD	BLE	BLF	BLG	BLH	BLI	BLJ	BLK	BLL
2018	BRA	BRB	BRC	BRD	BRE	BRF	BRG	BRH	BRI	BRJ	BRK	BRL
2019	BSA	BSB	BSC	BSD	BSE	BSF	BSG	BSH	BSI	BSJ	BSK	BSL
2020	BTA	BTB	BTC	BTD	BTE	BTF	BTG	BTH	BTI	BTJ	BTK	BTL

Outer Panels, Boiler, and Liner

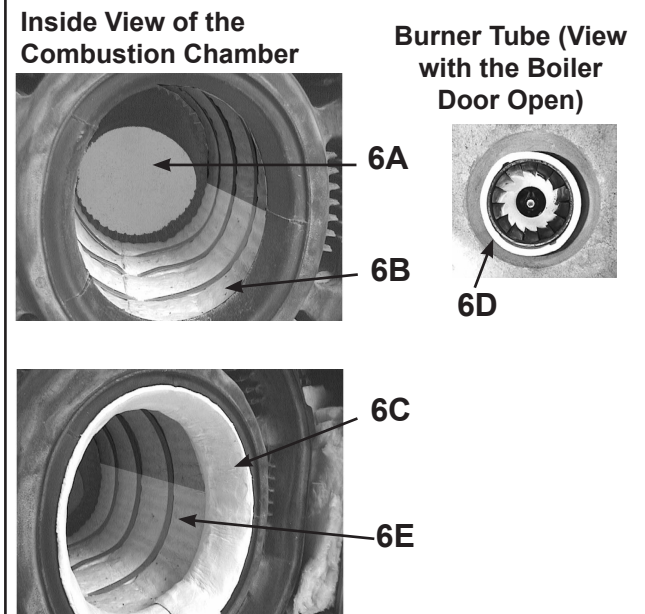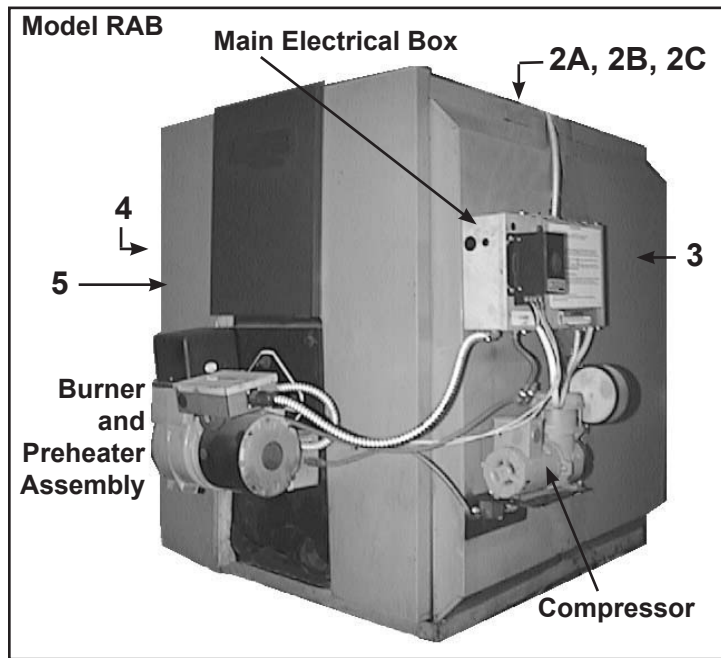

Code	Description	140	235	350	500
1	Boiler Assembly (not illustrated)	175104	175105	175106	175107
2A	Top Cover Panel	175116	175120	—	
2B	Front Top Cover Panel	—		175123	175127
2C	Rear Top Cover Panel			194489	194490
3	Right Side Cover Panel	175117	175121	175124	175128
4	Left Side Cover Panel	175118	175122	175125	175129
5	Front Cover Panel	175119		175126	
6	Replacement Liner and Burner Tube Insulator Kit	175994		175995	
6A	Combustion Chamber Back Plate Liner	174682			
6B	Combustion Chamber Liner Sleeve	174701		174700	
6C	Combustion Chamber Opening Liner	—		174702	
6D	Burner Tube Insulator	174703			
6E	Metal Bands to support liner during hardening	(3) 176299			
7	Combustion Chamber Liner Repair Sealer	176148 (caulking tube)			
8	Boiler Door Insulation, Small Piece (not illustrated)	179322, Buderus #5335896, G215		179325, Buderus #5335830, G315	
9	Boiler Door Insulation, Large Piece (not illustrated)	179323, Buderus #5335898, G215		179326, Buderus #5335946, G315	
10	Boiler Front Insulating Ring (not illustrated)	179324, Buderus #5335894, G215		—	
11	Cleaning Brush Set	194618		194619	
12	Sight Glass Flange, Buderus #5438-166	205425			
13	Sight Glass Gasket, Buderus #57752-520	205426			
14	Sight Glass, Buderus #5438-172	205427			
15	Blank Burner Plate, Buderus #5431-290	205428			
16	Hinge, Buderus #5327-443	205429			
17	3" Discharge Fitting (water), Flange Mount	214390 (with one (1) 3/4" fitting and four (4) 1" fittings)			
18	3" Return Fitting (water), Flange Mount	214391			

Draft Regulator, Draft Inducer, and Vent Cap

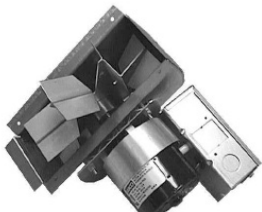
Code 19A - Draft Regulator All Sizes - PN 37865 	Code 19B - Draft Inducer Sizes 140, 235–115 volt, PN 174705 Size 350, 500–115 volt, PN 175993 	Code 19C - Vent Cap All Sizes - 8", PN 147149 
---	---	---

Fuel Pre-Heater System

*See IMPORTANT NOTE on page 1.

Code	Description	140/235	350	500*
20	Fuel Pre-heater Box (less Codes 21 and 22)	104784		
21	Fuel Pre-heater Box Front	104788		
22	Fuel Pre-heater Box Corner	104789		
23	Band (from pre-heater box around burner tube) - not illustrated	179313		
24	Oil Primary Heater Assembly (includes 2-piece aluminum cylinder, end cap, and O-ring, Code 24A)	101916		
24A	Replacement O-ring for Oil Heater cylinder	132224		
25	Oil Temperature Control, 160°F Open/150°F Close	256292 (replaces 210761)		
26	Low Oil Temperature Limit, 155°F, Honeywell 2455RPV8755003	210762 (replaces 105319 identified by yellow dot)		
27	High Oil Temperature Limit, 220°F, Honeywell 2455RPV8755001	210763 (replaces 105320)		
28	Heater, Hotwatt #SC75-6	106953, 300-watt/ 115V	209190, 500-watt/ 115V	209190, 770W, 120V (beginning 1/20/06) 157048, 770W, 230V (prior to 1/20/06)
29	Copper/Brass Pipe, 1/8" NPT x 2-1/2" L	107122		
30	Pre-Heater Front Support	104787		

Oil Preheating System

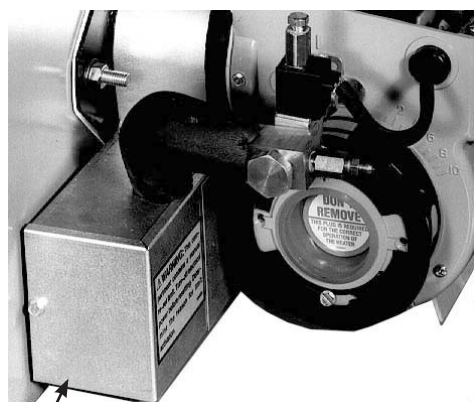

Preheater is located in the box (Codes 20, 21, and 22) below and behind the burner assembly

**26 - Low Oil Temperature Limit (with black wire)

**25 - Oil Temperature Control (with blue wire)

28 - Heating Element


To remove the heating element, remove the heater front support and pull heating element forward.

Brass Elbow, PN 110291

**27 - Manual Reset High Oil Temperature Limit (with yellow wire)

30 - Heater Front Support

**Controls illustrated are on units mfgd beginning 1/20/06.

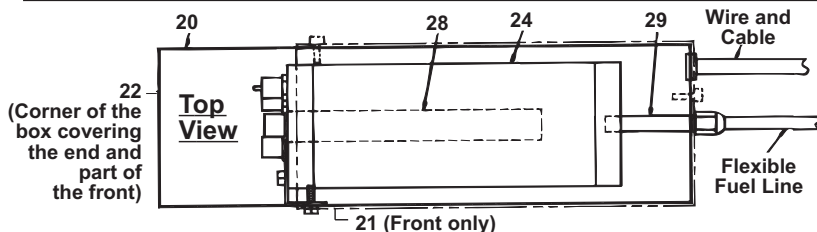

24A - O-Ring

24

Oil is heated as it flows around the cylinder.

Cylinder Cover

30 - Heater Front Support


Burner and Fuel Lines

Code	Description	140/235	350	500*
31	Burner Housing Assembly	121350	130647	209189, 120V (beginning 1/20/06) 157849, 230V (prior to 1/20/06)
31A	Burner Assembly Gasket	103420, Beckett #3416		
31B	Combustion Air Blower Wheel	107027, Beckett #2999		
31C	Flame Cone Assembly	104774	140346	163125, Beckett #2288U 131273
31D	Burner Motor	41598, Beckett #2-456, 1/7 HP		
31E	Air Guide, Beckett #31231	147096		
32	Burner Tube Insulator (Same as CODE 6D, page 2)	174703		
33	Transformer with Gaskets and Electrode/Transformer Connectors (includes CODES 33A and 33B)	101332, 120V		
				220627, 120V, Beckett 2289U (beginning 1/20/06) 220628, 230V, Beckett #21176U (prior to 1/20/06)

Code	Description	140/235	350	500*
33A	Electrode/Transformer Connector only			(2) 137576
33B	#10 Hex Nut for attaching connector to transformer			(4) 26490
34	Cad Cell Detector and Eye			123195, Honeywell #C554A-1794
	Manual Reset Limit (flame rollout) Switch and Bracket			209162 (green dot), 175°F
35	Flame Rollout Switch Retrofit Kit - for boilers mfgd before 4/00 without a flame rollout switch	179311		179312

*See IMPORTANT Note on page 1.

Burner Assembly

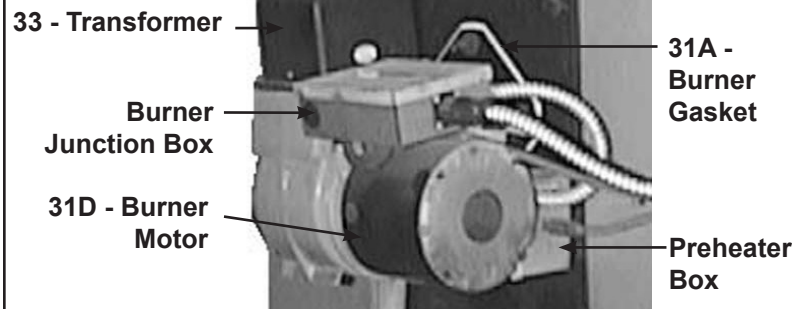

CODE 31B - Combustion Air Wheel



CODE 34 - Cad Cell



CODE 31C - Flame Cone Assembly




CODE 35 - Flame Rollout Switch



Burner Fuel Line/Nozzle Assembly

CODE 40 - Fuel Line/Nozzle Assembly

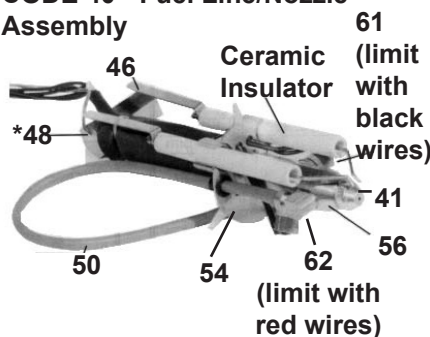

*CODE 48 - Inlet Heater


Remove the rubber insulation to free the 30-watt heating element (CODE 47). When replacing, use insulation to retain new element.

NOTE: The nozzle adapter (CODE 56) also contains a 30-watt heating element (CODE 47). To replace that element: (1) Remove the buss bars. (2) Unscrew the inlet heater and slide the black insulation rearward. Loosen the set screw which retains the static plate and slide rearward. This will expose the heating element.

Code	Description	140/235	350	500*
40	Fuel Line/Nozzle Assy	174888	174889	221450
Components (Code 40 includes Codes 41 - 62)				
41	Nozzle, Delavan (includes Code 41A)	102997	129382	157041
41A	Nozzle O Ring only, Delavan 31351-3		123399	
42	Electrode Kit #27195-02		269820 (includes 2 electrodes)	
43		Not used		
45	Varglas Sleeving #1 x 6" L		90511	
46	Buss Bar, Crown Eng #271968		(2) 107213	
47	Heater, 30-watt, Hotwatt	(2) 106952, 115V		(2) 106952, 115V (beginning 1/20/06) (2) 157049, 230V (before 1/20/06)
48	Brass Inlet Heater		120287	
49	Ty-Rap, 6" L, T&B #TY-24M		(2) 20913	
50	Silicone Rubber Tubing	174879, 30"		174880, 34"
51	Snap Bushing, Heyco #SB-500-6		(2) 29871	
52	Tubing Barbed Fitting, 1/8" IP x 1/4		106396	
53	Brass Street Elbow, 1/8" NPT		110314	
54	Static Plate Assy with electrode clamps		106176	
56	Nozzle Adapter		104766	
57	Machine Screw, Sems 6-32 x 1/4" L		(4) 107119	
58	Set Screw, 1/4-20 x 3/8" L		110942	
59	Foam Rubber Insulation, 3/8" ID x 1/2" wall x 4-3/4" L		107121, Rubatex #R-180-FS	
60	Copper/Brass Pipe 1/8" NPT x 6" L		106186	
61	Low Oil Temperature Limit	210764, 145°F Honeywell 2455RBV81170362 (replaces 124038)		
62	Nozzle Temperature Control	210765, 160°F Honeywell 2455RBV81170363 (replaces 124039)		

*See IMPORTANT Note on page 1.

Fuel Line/Nozzle Assembly Components

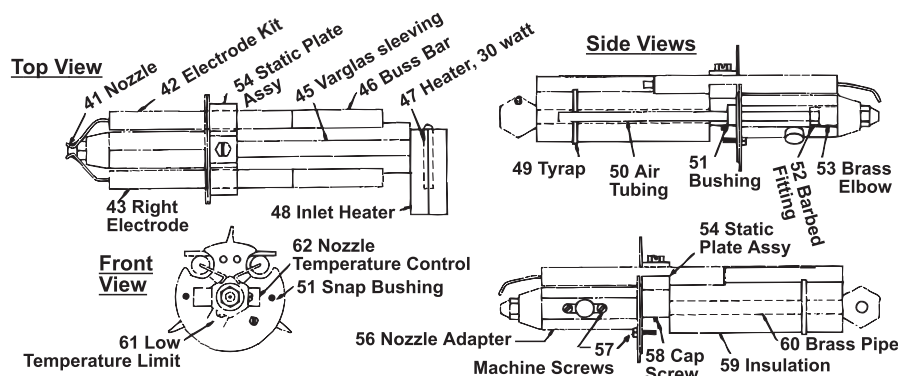


Burner Fuel Line/Nozzle Assembly (cont'd)

Code	Description	All Sizes
Fuel Line Components		
70	Secondary Strainer Assembly	110233
70A	Screen, 7/16" diameter x 7/8" L	110236
70B	Spring, Associated Spring #CO390-043-0810-M	110235
70C	O Ring, Size 113, Viton #AS568-113	110237
70D	Bleeder Adapter	113795
70E	Bleeder	113796
70F	Plug	107371
70G	Tee	107341
71	Oil Solenoid Valve, Asco #U8325B7V	110177
72	Fuel Connection Assembly	120288
73	Fuel Connection Nut	104835
74	Copper Tubing Assembly, Yoder #110290	110290
75	Foam Rubber Insulation, 3/8" I.D. x 1/2" Wall x 4-3/4" L (not illustrated)	107121
76	Flexible Fuel Line, 18"	107164

NOTES:

- Oil solenoid valve to be piped as follows:
Port (1) to secondary strainer assembly;
Port (2) to fuel connection assembly; and
Port (3) to hex head plug.
- Located on both ends of conduit coupling.
- Located on the inside of the burner housing assembly
- Wrap 4-3/4" long foam rubber insulation (PN 107121) around copper tubing assembly.
- Add #4 x 4" long varglass sleeving (PN 107312) around the oil solenoid valve wires.
- All connections are to be tight and leak-free.


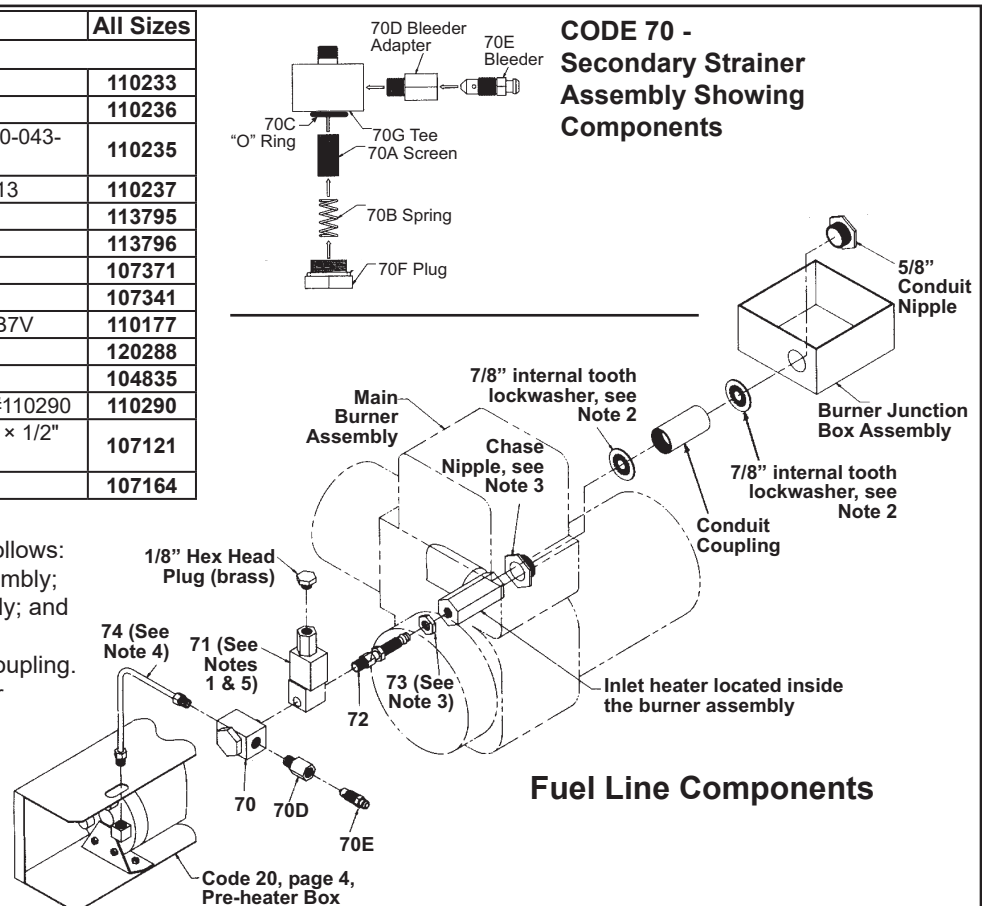


Electrical Components

Code	Description	Location	140/235	350	500*
80	Main Electrical Control Box	Attached to side of Boiler	104776		157137
81	Electrical Box Fixed Cover		104781		157968
82	Electrical Box Hinged Cover		104780		157969
83	Main Control Switch DPST 20A, Cutler Hammer	Side of Main Control Box	104840, #7630K40	158203, #7599K1	
84A	Ignition Controller, Carlin 42230	Front of Main Control Box	208973		
84B	Ignition Controller Replacement Kit (replaces all controllers)		170188		
85	Pressure Switch (located behind fixed portion of box cover)	Main Control Box	104842, Tridelta #FS3440-894		
85A	Dampening Orifice for Pressure Switch, 0.028", red		121726		
86	Silicone Rubber Tubing, 6"		148986		
87	Open/Closed Bushing, Heyco #OCB-562		98394		
88	Cable Clamp, 1/4", Heyco #3324		52961		
89	Dart Fastener, TRW #PC47307EVZ001		101798		
90	Ty-Rap, 6" L, T&B #TY-24M		20913		
91	Terminal Block, 1-1/4" L	Main Control and Burner Box	144972		
93	Burner Junction Box	On Burner Housing	104800		157905
94	Burner Junction Box Cover		104801		158807
95	Hole Plug, Heyco #DP-875	All holes	16452		
96	Internal Tooth Lockwasher, 7/8"	Burner Junction Box	(2) 110240		
97	Strain Relief, Heyco #SR-7W2		(2) 16835		
98	Fuse	Main Control Box	121355 - 10 Amp		
99	Green indicator Light, Industrial Devices #105QC5		123460		
100	Ground Wire Assembly		122114		
101	Post Purge Burner Relay, W/R 134-20203-301		102385 - 120V coil (Size 500 mfgd before 1/20/06 used 230V coil, order Kit PN 263529)		
102	Contact, Furnace #HCC-2XT01AA, 25 Amp, 120VCoil				157955
103	Time Delay Relay		141675		
104	Transformer, Hevi-Duty SMT #T050, 50VA				157952
105	Water Pressure/Temperature Gauge	On Back of Boiler	175130	194219	
106	Drain Valve (water)			175131	
107	Relief Valve (water)			175132	

Code	Description	Location	140/235	350	500*
108	Pump Relay	Main Control Box	—		Beginning 9/2011, 102385
109	Draft Inducer Relay				Prior to 9/2011, order Kit PN 263530
110	Aquastat Relay	On top of Boiler			230V - order Kit PN 263529
111	Low Water Cutoff, Safgard #SAF550SV, manual reset				174692
112	Draft Proving Switch	Vent			217257 (replaces 174693)
					176300

 
*See **IMPORTANT Note** on page 1.

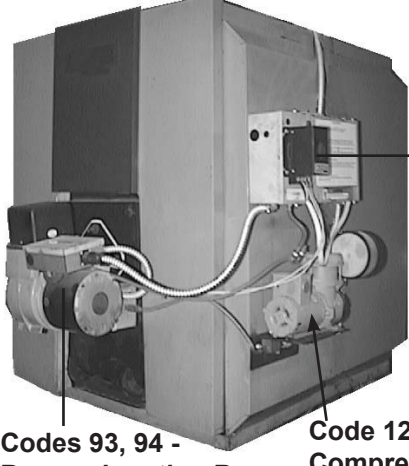 Codes 80, 81, 82 - Main Control Box Codes 93, 94 - Burner Junction Box Code 120 - Compressor	CODE 84 - Ignition Controller, PN 208973 	CODE 85 - Pressure Switch, PN 104842 	CODE 98 - Fuse 		
	CODES 101 and 109 - Post Purge Burner Relay or Draft Inducer Relay 	CODE 103 - Time Delay Relay, PN 141675 			
	CODE 104 - Transformer, PN 157952 	CODE 105 - Water Pressure/Temperature Gauge Sizes 140/235, PN 175130 Sizes 350/500, PN 194219 	CODE 106 - Drain Valve (water), PN 175131 		
CODE 107 - Relief Valve (water), PN 175132 	CODE 108 - Oil Pump Relay, PN 102385 For units mfgd prior to 9/2011, order Kit PN 263530 . 	CODE 110 - Aquastat Relay, PN 174692 	CODE 111 - Low Water Cutoff, PN 217257 	CODE 112 - Draft Proving Switch, PN 176300 	CODE 113 - 24 Volt Thermostat, PN 255350, HW T812C1000, 50-90°F, with fan and system switches 

Compressed Air System


Code	Description	140/235	350	500*
120	Air Compressor, Gast #SOA	119636, 115V (Size 500 mfgd before 1/20/06 used 230V, PN 157043)		
120A	Capacitor for Air Compressor	130390, 115V (Size 500 mfgd before 1/20/06 used 230V, PN 204267)		
121	Compressor Repair Kit	122876, Gast #K401		
122	Compressor Shelf	174704		
Air Manifold Components				
123	Reducer	126593		
124	Cross	126592		
125	Hose Barb	(2) 106396		
126	Air Bleed Orifice	16588, #65	121359, #68	132349, #70
*See IMPORTANT Note on page 1.				

Primary Air Filter
(see Code 130, right)

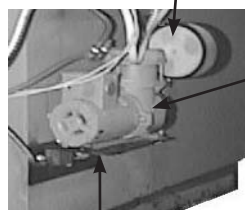


122

Compressor and Air Manifold

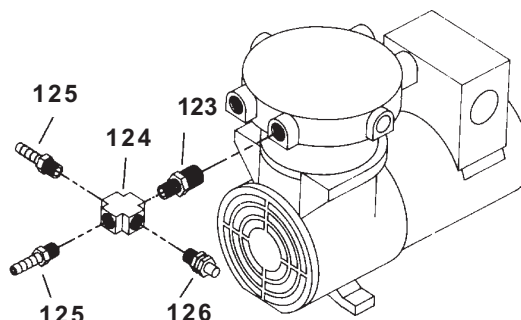

Primary Air Filter Components

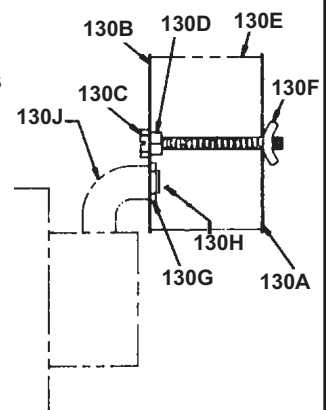


Code	Description	All Sizes
130	Air Filter and Piping Assy	121182
Components:		
130A	Outer Disk	107217
130B	Inner Disk	107218
130C	Hex Head Bolt 1/4-20 x 3" L	10653
130D	Hex Nut (Keps) 1/4-20	7328
130E	Air Filter, Wix 42374	107216
130F	Wing Nut, 1/4-10	107246
130G	Nut	110628
130H	Hex Bushing 1/4" x 1/8"	87022

Remote Pump Assy and Fuel Supply Line Components


Code	Description		140	235	350	500
150	Complete Remote Pump Assy with belt driven motor (on units beginning 2/06)	0–3000 ft (0–914M) elevation	209566	209569	209572	209574
		above 3000–7000 ft (914–2134M)	209567	209568	209573	—
		above 7000 ft (2134M) elevation	—	209570	—	—
150A	Pump Enclosure	Replacement parts for a remote pump assembly with a belt driven motor (on units beginning 1/20/06).	209198			
150B	Pump Fixed Cover		209408			
150C	Pump Access Cover		209407			
150D	Top Divider(box)		209195			
150E	Belt Pump Motor		208473 (Capacitor, PN 163894)			
150F	Belt		209146	209147	209149	209150
150G	Cooling Fan		131600			
150H	Pump Pulley		209143	209144	209145	—
150J	Belt Drive Mtr Bracket		209196			
151	Replacement Kit to change remote pump assembly from a gear motor to a belt drive motor	0-3000 ft (0–914M) elevation	211056	211059	211062	211064
		above 3000–7000 ft (914–2134M)	211057	211058	211063	—
		above 7000 ft (2134M) elevation	—	211060	—	—
152	Motor Sheave for CODE 150E	0–3000 ft (0–914M) elevation	209134	209137	209139	209141
		above 3000–7000 ft (914–2134M)	209135	209134	209140	—
		above 7000 ft (2134M) elevation	—	209136	—	—
153	Bore Reducer (for remote pump w/belt drive motor)		—		209142	
154A	Replacement Gear Motor (for remote pump with gear motor, mfgd prior to1/20/06) - PN 106945, 116159, and 129381 are Merkle-Korff; PN 157044 is Rex Engineering		116159	106945	129381	157044
			1.0 GPH	1.75 GPH	2.5 GPH	3.57 GPH
			115V	115V	115V	230V
154B	Gear Motor Bracket		113440		157907	
155	Replacement Bearing Assembly for Merkle-Korff Gear Motors		149173		—	
156	Replacement Capacitor for Gear Motor, GE 3MFD, 370VAC		—		174680	
157	Replacement Fan Impeller (blue) for some Merkle-Korff Gear Motors, Reznor PNs 106946, 116159, 112707 only	205424	N/A			
158	Flexible Coupling, 5/16", Beemer #5802 (for pump assy with a gear motor - mfgd prior to 1/20/06)		112042			
160	Oil Pump, Suntec #A2RA-7710		107032			
160A	Oil Pump Replacement Screen, Suntec #3715747		123450			
160B	Replacement Gasket for Pump, Suntec #3779801		123451			
161	In-line Relief Valve, Circle Seal#532B-2MP-50 St @ 50 PSIG		106947			
162A	Pump Solenoid Valve (replaced by CODE 162B on units mfgd beginning 7/99)		110177 (replaces 107029)			157046
	Check Valve, Valstop #H141, 1/4"		175263			
162B	Hardware for replacing 162A with 162B: (1) 1/4" to 1/8" reducer, PN 126593; (1) 5/16" flat washer, PN 1087; (1) 9/16" hole plug, PN 82433					
163	Fuel Filter Assembly, Lenz #CP-750-100		96388			
163A	Replacement Cartridge for Fuel Filter		176535			
163B	Replacement O Ring for Fuel Filter		102294			
164	Inlet Manifold 		131792			
165	Vacuum Gauge, NoShok #GV-10 (replaces 126595)		135080			
166	Foot Valve, 2/3" NPT, Valstop #60020		110320			
167	Foot Valve Strainer, #2-1/2N 30 Sump Strainer		136864			
168	Hour Meter 		119983, Redington #711-0109 (Size 500 mfgd before 1/20/06 used 230V, PN 157687)			

CODE 150 - Remote Pump Assy

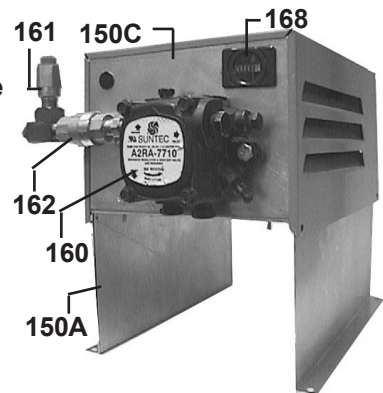


Two Views of Remote Pump Assy with Cover Removed (depending on date of manufacture, pump is controlled by a gear motor or a belt driven motor)

Inside of CODE 150 Remote Pump Assy w/belt-driven motor (mfgd beginning 1/20/06)

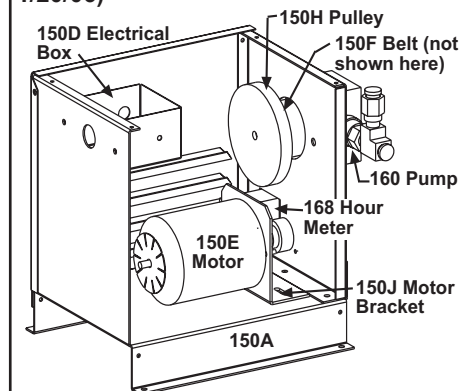

Inside (top view) of CODE 150 Remote Pump Assembly with a Gear Motor - As of 1/20/06, the gear motor is replaced with a pulley motor. See CODE 151 for replacement kit or CODES 154-158 for replacement gear motor parts.

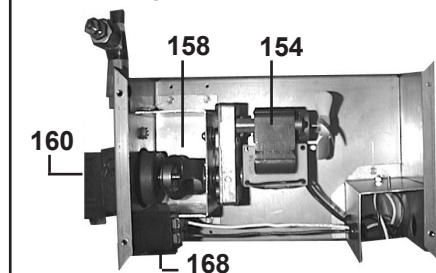

CODE 160 - Pump (and replacement parts)

Pump



CODE 160A - Screen



CODE 160B - Gasket



Pump Cover and Hardware



CODE 163, Supply Line Fuel Filter, PN 96388



Replacement Filter Canister, PN 176535

Replacement O Ring, PN 102294


CODE 165 - Vacuum Gauge



CODE 166 - Foot Valve



CODE 167 - Foot Valve Strainer

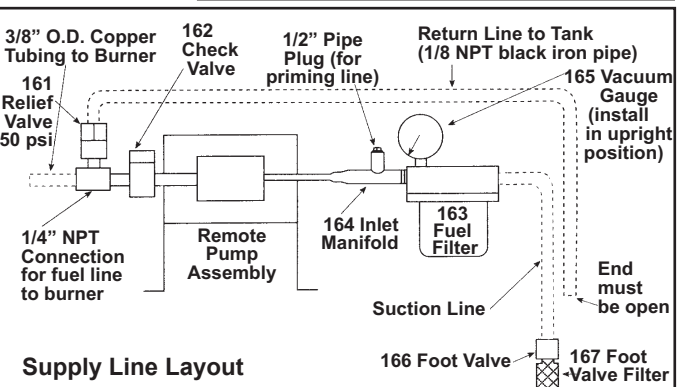

Specifications and illustrations subject to change without notice or incurring obligations.

Latest version of this manual is available at www.reznorhvac.com.

©2025 Reznor LLC, Saint Charles, MO. All rights reserved.

RAB-RPL (07-25) REV-A

