



WARNING

When using electrical appliances, basic precautions should always be taken to reduce the risk of fire, electrical shock and injury, including the following:

IMPORTANT INSTRUCTIONS

- # SAVE THESE INSTRUCTIONS

IMPORTANT
 Connect the control (thermostat or relay)
 to the T1-T2 position on the terminal block.
 Do not interrupt power supply to control this heater.

This heater includes a visual alarm to warn that parts of the heater are getting excessively hot. If the light turns on, immediately turn the heater off and inspect for any objects on or adjacent to the heater that may have blocked the airflow or otherwise caused high temperatures to have occurred. **DO NOT OPERATE THE HEATER WHEN THE ALARM LIGHT IS ON.**



T-BAR Option

- The heater motor is permanently lubricated.
- Wait until the housing and heating elements cool before performing maintenance.
- Once a year, remove the front cover and use a vacuum cleaner or compressed air to remove the dust accumulation inside the heater.
- Cleaning should be done while the heater is disconnected from the power supply circuit.
- A qualified technician should perform any other servicing.

INS135-200404-08

Reznor LLC, Saint Charles, MO
Tel.: 1 800 695-1901
www.ReznorHVAC.com
©2025 Reznor, LLC. All rights reserved. All other trademarks are the
property of their respective organizations.

AVERTISSEMENT

Lors de l'utilisation d'appareils électriques, il est important de respecter les règles de sécurité de base, notamment les consignes suivantes, pour réduire les risques d'incendie, de choc électrique et de blessure.

INSTRUCTIONS IMPORTANTES

- # CONSERVER CES INSTRUCTIONS

IMPORTANT
Brancher le contrôle (thermostat ou relais) aux bornes T1-T2.
Ne jamais interrompre la ligne d'alimentation
pour contrôler cet appareil.

INS135-200404-08