

OUTDOOR AIR HANDLER INSTALLATION, OPERATION, AND MAINTENANCE

MODEL RPBL



⚠ DANGER ⚠

FIRE OR EXPLOSION HAZARD

- Failure to follow safety warnings exactly could result in serious injury, death, or property damage.
- Improper installation, adjustment, alteration, service, or maintenance can cause serious injury, death, or property damage.
- Installation and service must be performed by a qualified installer, service agency, or the gas supplier.
- Be sure to read and understand the installation, operation, and service instructions in this manual.
- Do not store or use gasoline or other flammable vapors and liquids in the vicinity of this or any other appliance.

WHAT TO DO IF YOU SMELL GAS

- Do not try to light any appliance.
- Do not touch any electrical switch; do not use any phone in your building.
- Leave the building immediately.
- Immediately call your gas supplier from a phone remote from the building. Follow the gas supplier's instructions.
- If you cannot reach your gas supplier, call the fire department.

DO NOT DESTROY. PLEASE READ CAREFULLY. KEEP IN A SAFE PLACE FOR FUTURE REFERENCE.

TABLE OF CONTENTS

GENERAL INFORMATION	4
Important Safety Information	4
Warranty	5
Certification	5
Installation Codes	5
System Configurations	5
Clearances	5
Dimensions	6
Weights	7
Unit Location	7
Halogenated Hydrocarbons	7
Curb Cap Base	7
INSTALLATION	8
Unpacking and Inspection	8
Pre-Installation Checklist	8
Mounting Support Structure	9
Bottom Duct Connections	9
Roof Curb (Option CJ1 or CJ2)	10
Field-Supplied Support Assembly	10
Mounting	11
Duct Connections	12
Requirements and Suggestions for Connecting and Installing Ducts	12
100% Outside Air Hood (Option AS2)	14
Screened Air Hood for 30% Outside Air Opening (Option AR6 or AR7)	14
Evaporative Cooling Module (Option ECC1 or ECC2)	14
Discharge Air Temperature Sensor Installation	14
Vent Connections	16
Piping Connections	17
Gas Supply Pressure	17
Gas Supply Piping	17
Supply Piping Connections	18
Electrical Connections	19
Control Wiring Connections	20
CONTROLS	21
Standard Controls	21
Combustion Air Proving Switch	21
Blower Fan Control	22
High Temperature Limit Switch	22
Reverse Flow Limit Switch	22
Combination Gas Valve	22
Pilot and Ignition Systems	23
Burners and Carryover System	23

TABLE OF CONTENTS—CONTINUED

Optional Controls	24
Two-Stage Heating Control (Options AG2 and AG11)	24
Two-Stage Makeup Air Control (Options AG3, AG15, and AG17)	24
Electronic Modulation (Options AG7, AG8, AG9, AG21, AG39, AG40, AG41, and AG42)	26
Dampers and Damper Controls (Options AR1, AR4, AR6, AR7, AR8, AR15, AR17, AR18, AR23, and AR25)	28
Dirty Filter Switch (Option BE18)	29
High Ambient Limit Control (Option BN2)	29
Airflow Proving Switch (Makeup Air with Option BW1)	29
Space Temperature (Option D19) or Makeup Air (Option D21) Control	29
Photoelectric Air Duct Smoke Detector (Option SA1)	30
Variable Frequency Drive (Options VFD1 and VFD2)	30
Thermostat	30
OPERATION	31
Pre-Startup Checklist	31
Startup	31
Post-Startup Checklist	32
ADJUSTMENTS	33
Belts, Blowers, and Drives	33
Checking and Adjusting Belt Tension	33
Adjusting Blower Speed	33
Reversing Blower Rotation	34
Adjust Heat Stage Controllers (Option AG41 or AG42)	35
Pressure Null Switch Adjustment	36
Damper Linkage Adjustment	37
Dirty Filter Switch Adjustment	38
Measure and Adjust Manifold (Outlet) Gas Pressure	38
High-Elevation Conversion	39
Gas Conversion	41
Burner Air Shutter Adjustment	41
MAINTENANCE	42
Maintenance Procedures	42
Combination Gas Valve Maintenance	42
Burner Rack Maintenance	43
Cleaning Pilot and Burners	43
Spark Ignition System Maintenance	44
Blower Bearing Lubrication	45
Venter Motor Maintenance	46
Cooling Coil Maintenance	46
Heat Exchanger Cleaning	46
TROUBLESHOOTING	47
General Troubleshooting	47
Troubleshooting Bypass Combustion Air Damper Safety Circuit on Units with Option AG39, AG40, AG41, or AG42	49
INSTALLATION RECORD (TO BE COMPLETED BY INSTALLER)	52

GENERAL INFORMATION

- This unit has been tested for capacity and efficiency so as to provide many years of safe and dependable comfort providing it is properly installed and maintained. With regular maintenance, this unit will operate satisfactorily year after year. Abuse, improper use, and/or improper maintenance can shorten the life of the appliance and create unsafe hazards.
- To achieve optimum performance and minimize equipment failure, it is recommended that periodic maintenance be performed on this unit. The ability to properly perform maintenance on this equipment requires certain tools and mechanical skills.
- These packaged systems include duct furnaces that are design-certified to ANSI and CSA standards by the Canadian Standards Association and that are approved for installation in the United States and in Canada. The furnaces are approved for use with either natural gas or propane. The type of gas for which the furnace is equipped, the correct firing rate, and electrical requirements are shown on the unit's rating plate.

Important Safety Information

Please read all information in this manual thoroughly and become familiar with the capabilities and use of your appliance before attempting to operate or maintain this unit. Pay attention to all dangers, warnings, cautions, and notes highlighted in this manual. Safety markings should not be ignored and are used frequently throughout to designate a degree or level of seriousness.

DANGER: A danger statement describes a potentially hazardous situation that if not avoided, will result in severe personal injury or death and/or property damage.

WARNING: A warning statement describes a potentially hazardous situation that if not avoided, can result in severe personal injury and/or property damage.

CAUTION: A caution statement describes a potentially hazardous situation that if not avoided, can result in minor or moderate personal injury and/or property damage.

NOTE: A note provides important information that should not be ignored.

DANGER

- **Gas-fired appliances are not designed for use in hazardous atmospheres containing flammable vapors or combustible dust, in atmospheres containing chlorinated or halogenated hydrocarbons, or in applications with airborne silicone substances.**
- **Should overheating occur, or the gas supply control system fail to shut off the flow of gas, shut off the manual gas valve to the unit before shutting off the electrical supply.**
- **Do not use this appliance if any part has been under water. Immediately call a qualified service technician to inspect the appliance and replace any gas control that has been under water.**
- **Installation should be done by a qualified agency in accordance with these instructions. The qualified service agency installing this heater is responsible for the installation.**
- **This appliance is not intended for use by persons with reduced physical, sensory, or mental capabilities or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.**
- **Children should be supervised to ensure that they do not play with the appliance.**

WARNING

For your safety, read the warning labels on the unit.

NOTES:

- **Read this manual and become familiar with the installation requirements of your particular furnace. If you do not have knowledge of local requirements, check with the local gas company or any other local agencies who might have requirements concerning this installation.**
- **The instructions in this manual apply only to model RPBL units.**

Warranty

Refer to the limited warranty form in the literature bag provided with the unit. The warranty is void if:

- Furnaces are used in atmospheres containing flammable vapors or atmospheres containing chlorinated or halogenated hydrocarbons or any contaminant (silicone, aluminum oxide, etc.) that adheres to the spark ignition flame sensing probe.
- Wiring is not in accordance with the diagram furnished with the heater.
- Unit is installed without proper clearance to combustible materials or without proper ventilation and air for combustion.
- Furnace air throughput is not adjusted within the range specified on the rating plate.

Certification

- This unit is design-certified to ANSI and CSA standards by the Canadian Standards Association and is approved for installation in the United States and in Canada. The furnaces are approved for use with either natural gas or propane. The type of gas for which the furnace is equipped, the correct firing rate, and electrical requirements are shown on the unit's rating plate.
- These gas-fired products are certified by ANSI Z83 family of standards governing the safe usage of heating equipment in the industrial/commercial marketplace. This includes using the heaters in makeup air applications to supply corridor pressurization in commercial buildings such as office structures and apartment complexes.
- The heaters are not certified as residential heating equipment and should not be used as such.

Installation Codes

- These units must be installed in accordance with local building codes. In the absence of local codes, in the United States, the unit must be installed in accordance with the *National Fuel Gas Code* (NFPA 54/ANSI Z223.1, latest edition). A Canadian installation must be in accordance with the *Natural Gas and Propane Installation Code* (CSA B149, latest edition). This code is available from CSA Information Services, 1-800-463-6727. Local authorities having jurisdiction should be consulted before installation is made to verify local codes and installation procedure requirements.
- If the heater is being installed in the Commonwealth of Massachusetts, installation must be performed by a licensed plumber or licensed gas fitter.

System Configurations

Table 1. System Configurations		
Unit Size (MBTUh)	No. of Furnace Sections	No. of Blower Cabinets
400	1	1
500, 600, 700, 800	2	
1050, 1200	3	

Clearances


Clearance to combustibles is defined as the minimum distance—from the heater to a surface or object—that is necessary to ensure that a surface temperature of 90°F (50°C) above the surrounding ambient temperature is not exceeded. For safety, adequate combustion air, and convenient installation and service, ensure that the clearances listed in [Table 2](#) are provided.

Table 2. Clearances	
Unit Surface	Minimum Clearance (Inches (mm))
Control side	56 (1422)
Side opposite controls, for motor access	30 (762)
Bottom	0 (0)*

*When the unit is installed on a roof curb on a combustible roof, the roof area enclosed within the curb must be either ventilated, left open, or covered with noncombustible material that has an R-value of at least 5.0.

GENERAL INFORMATION—CONTINUED

Dimensions

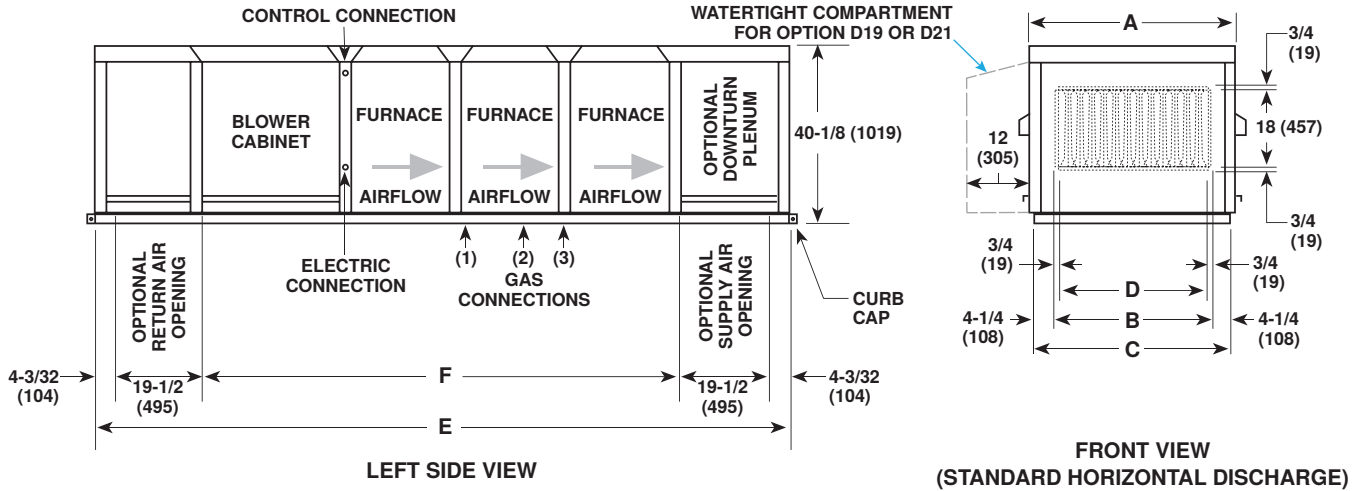

NOTE: Burner and control access shown left-hand side. Specify right-hand side for opposite access and connections.

Figure 1. Dimensions (Refer to Table 3)

Table 3. Dimensions						
Dimension (See Figure 1)	Unit Size (MBTUh)					
	400	500, 600	700	800	1050	1200
	Inches (mm)					
A*	58-7/8 (1495)	47-1/8 (1216)	53-3/8 (1356)	58-7/8 (1495)	53-3/8 (1356)	58-7/8 (1495)
B	47-5/8 (1210)	36-5/8 (930)	42-1/8 (1070)	47-5/8 (1210)	42-1/8 (1070)	47-5/8 (1210)
C	56-1/8 (1426)	45-1/8 (1146)	50-5/8 (1286)	56-1/8 (1426)	50-5/8 (1286)	56-1/8 (1426)
D	45-1/2 (1156)	34-1/2 (876)	40 (1016)	45-1/2 (1156)	40 (1016)	45-1/2 (1156)
E	83-3/4 (2127)	109-3/4 (2788)			135-3/4 (3448)	
	107-3/4 (2737)**	133-3/4 (3397)**			159-3/4 (4058)**	
F	60-5/16 (1532)**	86-5/16 (2192)**			112-5/16 (2853)**	
Air Opening (See Figure 1)				Inches (mm)		
Standard horizontal air inlet opening				19-1/2 (495) × B		
Optional return air opening (bottom)						
Optional discharge air opening with downturn plenum						
Standard horizontal discharge air opening				18 (457) × D		
Gas Connection Location*** (See Figure 1)		Approximate Distance from Inside Curb Cap on Blower End of System (Inches (mm))			Unit Size (MBTUh)	
1		89–90 (2261–2286)			400	
2		103–104 (2616–2642)			500, 600, 700, 800	
3		110–111 (2794–2819)			1050, 1200	
*For units with option D19 or D21, add 12-1/4 inches (312 mm) for the watertight compartment, which is factory-installed on the unit's control compartment access panel.						
**With downturn plenum (option AQ5 or AQ8).						
***The gas connection is at curb cap height on the control side of the system.						

Weights

NOTE: The total weight of the system will vary based on its factory- and field-installed options, which may include insulated cabinets, air hoods, damper arrangements, and blower motors.

Table 4. Weights						
Type	Unit Size (MBTUh)					
	400	500, 600	700	800	1050	1200
	Pounds (kg)					
Unit	849 (385)	1104 (500)	1184 (537)	1245 (565)	1476 (670)	1565 (710)
Shipping (base unit)	1218 (552)	1588 (720)	1668 (757)	1898 (861)	2148 (974)	2243 (1017)
Unit with AQ5 downturn plenum cabinet	1120 (509)	1333 (605)	1437 (652)	1516 (688)	1729 (785)	1836 (833)
Unit with AQ8 downturn plenum cabinet	1159 (526)	1366 (620)	1473 (669)	1555 (706)	1765 (801)	1875 (851)
Evaporative cooling module (option ECC1 or ECC2)	374 (170)					

Unit Location

⚠ CAUTION ⚠

To ensure complete weather resistance, an outside air hood or evaporative cooling module is required.

- Select a location that complies with the requirements in this manual.
- There are a variety of factors, such as system application, building structure, dimensions, and weight, that contribute to selecting the location.
- The location must comply with the clearances listed in [Table 2](#).
- If the unit is equipped with an outside air hood, it is recommended that the inlet to the hood not be facing into the prevailing wind.

Halogenated Hydrocarbons

Halogenated hydrocarbons are a family of chemical compounds characterized by the presence of halogen elements (fluorine, chlorine, bromine, etc.). These compounds are used in refrigerants, cleaning agents, and solvents and are heavier than air, a fact that should be kept in mind when determining the installation location of heaters and building exhaust systems.

⚠ CAUTION ⚠

CORROSION HAZARD: Halogenated hydrocarbons, when exposed to flame, precipitate with any condensation present in the heater to form hydrochloric acid, which readily attacks all metals, including 300 grade stainless steel. Care should be taken to separate these vapors from the combustion process. An outside air supply MUST BE provided to the burner whenever the presence of these compounds is suspected.

Curb Cap Base

- Outdoor systems are equipped with a load bearing curb cap which forms an integral part of the unit. This curb cap has welded joints and has a skirt that fits over a roof curb to provide a weatherproof installation. Four holes are provided at the curb cap corners for lifting the unit. These holes do not interfere with unit weatherproofing. The curb cap is not designed to be placed directly on the roof surface.
- The system may be mounted on an optional roof curb purchased with the unit, a field-supplied roof curb, or field-supplied supports. If the system has a downturn plenum and/or a bottom return air opening, a roof curb is recommended to provide a weatherproof installation as well as more workable clearances for ductwork (refer to [Bottom Duct Connections](#) section).

INSTALLATION

Unpacking and Inspection

The unit was test-operated and inspected at the factory prior to crating and was in operating condition. If, upon removing it from its crate, the unit has been found to have incurred any damage in shipment, document the damage with the transporting agency and contact an authorized Factory Distributor. If you are an authorized Distributor, follow the FOB freight policy procedures.

Pre-Installation Checklist

- ☐ Check the rating plate for the gas specifications and electrical characteristics of the heater to ensure that they are compatible with the gas and electric supplies at the installation site.
- ☐ Read this manual and become familiar with the installation requirements of your particular heater.
- ☐ If you do not have knowledge of local requirements, check with the local gas company or any other local agencies who might have requirements concerning this installation.
- ☐ Before beginning, make preparations for necessary supplies, tools, and manpower.
- ☐ Check to see if there are any field-installed options (refer to [Table 5](#)) that need to be assembled/installed prior to unit installation. Ensure that all options ordered are at the installation site. Instructions are in this manual or in the shipped-separate option package.

Table 5. Field-Installed Options

Option	Description
AG7	Electronic modulation with room thermostat
AG9	Electronic modulation with 2:1 turndown ratio and with ductstat and remote temperature selector
AR6	30% outside air inlet hood with manual damper and bottom inlet
AR7	30% outside air hood with motorized damper and bottom inlet
AS2	100% outside air screened intake hood with rain baffles
ASA1	Moisture elimination pad
ASC4	12-inch rigid cellulose evaporative cooling media
ASC8	12-inch rigid glass fiber evaporative cooling media
CC3	Vertical vent kit
CJ1	Roof curb for base unit
CJ2	Roof curb for base unit with factory-installed downturn plenum cabinet (with option AQ5 or AQ8)
CL1	Single-stage thermostat
CL9	Electronic modulating room override
CL22	Two-stage thermostat
CL23	Two-stage programmable thermostat
CL33	Two-stage digital thermostat
CL36	Modulating wall heating/cooling thermostat (with option AG21, AG40, or AG42)
CL78	Space-mounted thermostat/sensor (with option D19 or D21)
CM1	Locking thermostat cover
CM1B	Large locking thermostat cover
CN1A–CN3Z	Various remote switch options
CP5, CP6, CP7, CP8, CP17, CP30, CP31, CP59	Disconnect switches
CT1	Fill and drain kit for float and pump control system (with option ECD2)
DR2, DR4, XB2	Replacement belts for belt-drive motor
ECB1	Water hammer arrestor for float and pump control system (with option ECD2)
ECC1	Aluminized-steel evaporative cooling module cabinet
ECC2	Stainless steel evaporative cooling module cabinet
ECD2	Float and pump control system
RB5	Remote display (with option D19 or D21)
SA1	Photoelectric air duct smoke detector

Mounting Support Structure

⚠ DANGER ⚠

Before installation, check the supporting structure to ensure that it has sufficient load-carrying capacity to support the weight of the unit along with any optional equipment (refer to [Weights](#) section). If the system includes an optional cooling cabinet and/or roof curb, refer to the installation instructions packaged with the option for weights and dimensions.

NOTE: Prior to installation, ensure that the method of support is in agreement with all local building codes and, for outdoor installations, is suited to the climate.

Bottom Duct Connections

The blower section and optional downturn plenum have duct flanges for connection to return air and supply air ducts. Duct opening sizes and curb spacing are shown in [Figure 2](#).

NOTE: [Figure 2](#) shows dimensions for currently-manufactured curbs that are available from the system manufacturer. The measurement from the duct openings to inside edge of roof curb is 1-5/8 inches (41 mm). Duct openings should be 1 inch (25 mm) larger than the duct size for installation clearance.

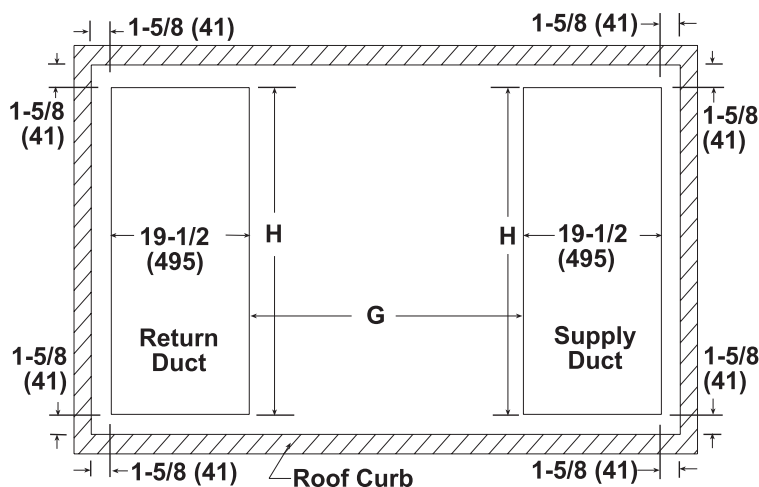


Figure 2. Bottom Duct Opening Dimensions (Refer to [Table 6](#))

Table 6. Bottom Duct Opening Dimensions							
Dimension (See Figure 2)	Configuration	Unit Size (MBTUh)					
		400	500, 600	700	800	1050	1200
		Inches (mm)					
G	With downturn plenum	60-5/16 (1532)	86-5/16 (2192)			112-5/16 (2853)	
	With cooling coil cabinet with downturn plenum	127-17/32 (3239)	142-17/32 (3620)	148-1/32 (3760)	153-17/32 (3900)	174-1/32 (4420)	179-17/32 (4560)
H	All	47-5/8 (1210)	36-5/8 (930)	42-1/8 (1070)	47-5/8 (1210)	42-1/8 (1070)	47-5/8 (1210)

INSTALLATION—CONTINUED

Mounting Support Structure—Continued

Roof Curb (Option CJ1 or CJ2)

If the installation includes an option CJ1 or CJ2 roof curb, install the curb in accordance with the instructions packaged with the curb.

Field-Supplied Support Assembly

⚠ WARNING ⚠

Do not close or block the openings under each end of a system mounted on 4 × 4 treated wooden rails. If cross supports are used under the 4 × 4 rails, do not enclose the area under the furnace. The space under the furnace **MUST** be left open for ventilation.

NOTES:

- The field-supplied, cross-support structure must be adequate for the weight of the system. Cross-supports should run the entire width of the system to support the rails at the recommended locations (see [Figure 3](#), DETAIL A).
- Whether the supports are mounted directly on a surface or placed up on an additional structure, the horizontal length of the system should be supported by two 4 × 4 treated wooden rails.
- If considering this type of installation in snow areas, it is recommended that the weather-resistant 4 × 4 wooden rails underneath the system be on a cross-support structure at least 12 inches higher than the roof surface.

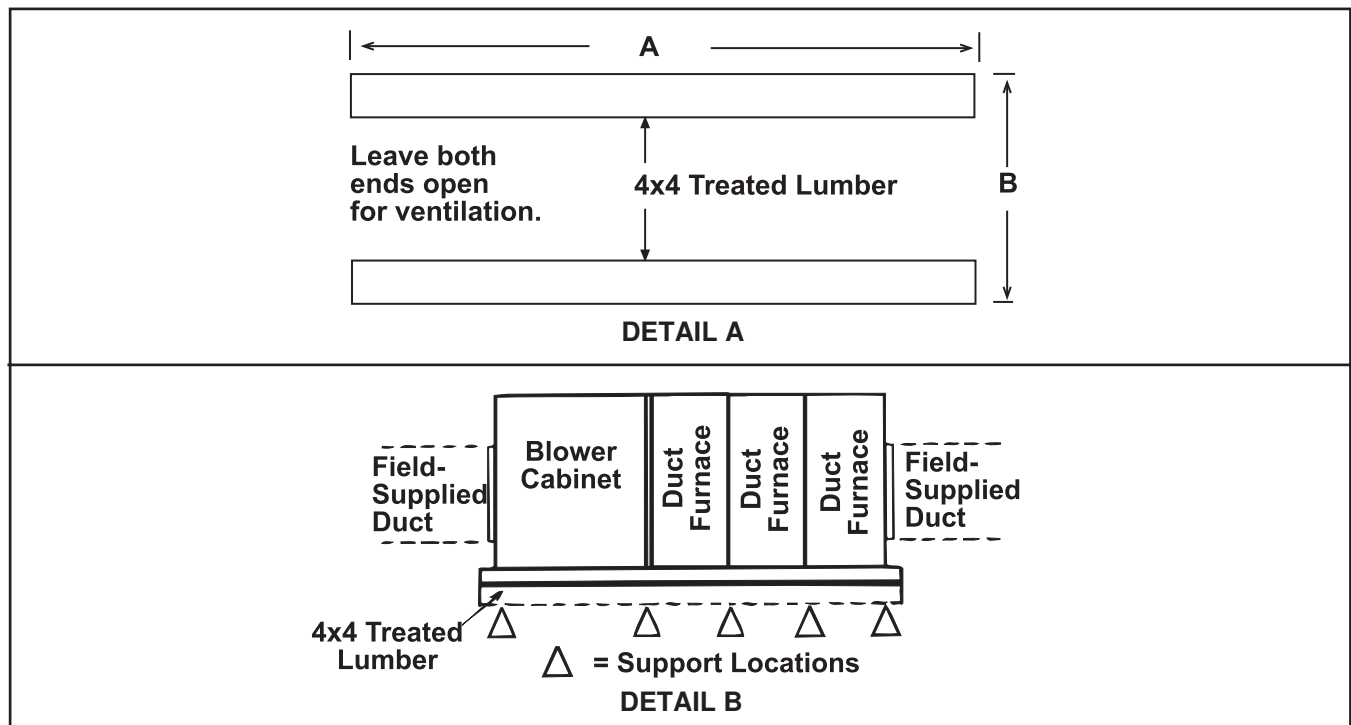


Figure 3. Field-Supplied Support Assembly (Refer to [Table 7](#))

Table 7. Field-Supplied Support Assembly Dimensions

Dimension (See Figure 3)	Configuration	Unit Size (MBTUh)					
		400	500, 600	700	800	1050	1200
		Inches (mm)					
A	Standard	82-1/4 (2089)	108-1/4 (2750)	108-1/4 (2750)	108-1/4 (2750)	134-1/4 (3410)	134-1/4 (3410)
	With downturn plenum (option AQ5 or AQ8)*	106-1/4 (2699)	132-1/4 (3359)	132-1/4 (3359)	132-1/4 (3359)	158-1/4 (4020)	158-1/4 (4020)
B	All	54-1/2 (1384)	43-9/16 (1106)	49-1/16 (1246)	54-1/2 (1384)	49-1/16 (1246)	54-1/2 (1384)

*Although dimensions are included for units with a downturn plenum cabinet, it is strongly recommended that a full roof curb be used on an installation with a downturn plenum cabinet and/or a bottom return air duct.

1. Cut treated 4 × 4 wooden rails for length in accordance with dimension A (see [Figure 3](#), DETAIL A).
2. Space rails in accordance with dimension B (see [Figure 3](#), DETAIL A) so that curb cap skirt fits over edge of boards with rails sitting inside horizontal length of curb cap. If rails are being laid directly on roof, position them as shown in [Figure 3](#), DETAIL A).
3. If rails are not being placed directly on surface, install cross-supports underneath rails at ends of unit and at all cabinet joints (see [Figure 3](#), DETAIL B).

Mounting

⚠ DANGER ⚠

Use a suitable hoist to lift the unit (refer to [Weights](#) section). Lifting holes are provided for rigging. Use spreader bars when lifting to prevent chains or cables from damaging the unit.

⚠ CAUTION ⚠

- All installed systems must be level.
- **IMPORTANT:** To prevent damage from wind blown rain and capillary action, the top surface of the roof curb or support rails **MUST BE** sealed using 1/4-inch × 1-1/4-inch sealant tape or two 1/4-inch beads of suitable sealant.

NOTE: If the system includes an outside air hood, a cooling coil cabinet, or an evaporative cooling module, install it after the unit is in place. The shipped-separate cooling coil cabinet—with or without a downturn plenum—**MUST BE** lifted to the roof separately from the unit, set on the roof curb or support rails, and connected to the furnace section of the packaged system. If the system includes an outside air hood, install it after the unit is in place.

1. If installing on roof curb (option CJ1 or CJ2), install curb in accordance with instructions packaged with the curb. If installing on support rails, apply two 1/4-inch beads of suitable sealant to top surface of rails.
2. Lift unit using suitable hoist and spreader bars and set it on curb or rails. If set on rails, leave ends open underneath for ventilation.

INSTALLATION—CONTINUED

Duct Connections

NOTE: Depending on how the unit was ordered, the blower cabinet can have a variety of outside air and return air inlets. Check the unit to be aware of the inlet air requirements for your installation. When ordered, a filter rack with a variety of filter options, is factory-installed in the blower cabinet. Refer to the replacement parts manual found at www.reznorhvac.com for replacement filters. For air opening dimensions, refer to [Table 3](#).

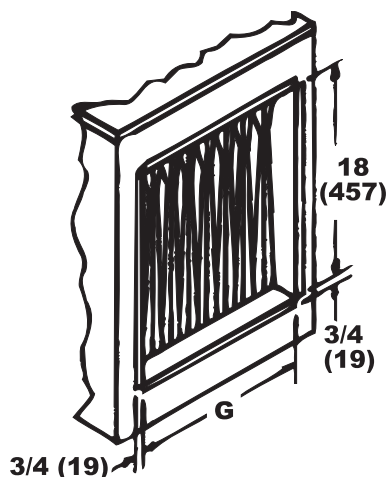


Figure 4. Duct Connection Dimensions (Refer to [Table 8](#))

Table 8. Duct Connection Dimensions		
Unit Size (MBTUh)		
500, 600	700, 1050	400, 800, 1200
Dimension G (Inches (mm))*		
34-1/2 (876)	40 (1016)	45-1/2 (1156)

*See [Figure 4](#).

Requirements and Suggestions for Connecting and Installing Ducts

- **Type of ductwork:** The type of duct installation to be used depends in part on the construction type of the roof—whether wood or steel bar joist, steel truss, or pre-cast concrete—and the ceiling—whether hung, flush, etc.
- **Ductwork material:** Rectangular duct should be constructed of galvanized iron—not lighter than No. 26 US gauge—or aluminum—No. 24 B&S gauge.
- **Ductwork structure:** All duct sections 24 inches (610 mm) or wider and over 48 inches (1,219 mm) in length should be cross-braken on top and bottom and should have standing seams or angle-iron braces. Joints should be S and drive strip or locked.
- **Through masonry walls:** No warm air duct should come in contact with masonry walls. Insulate around all air duct through masonry walls with 1-inch (not less than 1/2-inch) of insulation.
- **Through unheated space:** Insulate all exposed warm air ducts passing through an unheated space with 1-inch (not less than 1/2-inch) of insulation.
- **Duct supports:** Suspend all ducts securely from adjacent buildings members. Do not support ducts from unit duct connections.
- **Duct sizing:** Proper sizing of the supply air ductwork is necessary to ensure a satisfactory heating installation. The recognized authority for duct size is the Air Conditioning Contractor's Association, 2800 Shirlington Road, Suite 300, Arlington, VA 22206 (www.acca.org). A manual covering duct sizing in detail may be purchased directly from them.

⚠ CAUTION ⚠

To prevent possible motor overloading, ensure that the external duct system static pressure is within the limits shown on the rating plate and that the motor pulley and belt are properly adjusted.

- **Horizontal discharge duct length:** A minimum horizontal duct run of 24 inches (610 mm) is recommended before turns or branches are made in the duct system to reduce losses at the furnace outlet.

⚠ CAUTION ⚠

The joint where the supply air duct attaches to the furnace must be sealed securely to prevent air leakage into draft hood or burner rack area. Leakage can cause poor combustion and pilot problems, can shorten heat exchanger life, and can cause poor performance.

- **Supply air duct/furnace horizontal connection:** Connect the duct to the furnace in accordance with the following steps shown in [Figure 5](#):
 - a. Ensure that flanges on furnace (heat exchanger) turn out as shown.
 - b. Shape duct connection as shown—U-type on top and bottom and L-type on sides.
 - c. Slide U-channels over furnace top and bottom flanges.
 - d. Drill fastener holes and secure U-channels using sheet metal screws.
- **Access panels:** Install removable access panels (see [Figure 5](#)) on both the upstream and downstream sides of the furnace. The access panels must be accessible when the furnace is in service and should be a minimum of 6 × 10 inches (152 × 254 mm) in size so smoke or reflected light may be observed inside the casing to indicate the presence of leaks in the heat exchanger. Ensure that the access panels are installed in such a manner so as to prevent leakage.
- **Bottom duct/furnace connection:** Insert ducts from below the roof deck through the roof opening into the heater. Form 1-inch (25-mm) flanges, fold over, and fasten with sheet metal screws inside the heater. Gain access to the unit by removing side panels from the blower and downturn plenum sections. Ducts must be attached and sealed to provide airtight connections.
- **Return air duct/furnace connection:** All return air ducts should be attached and sealed to the return air flanges to provide airtight connections.
- **Return air duct/grill size:** Ensure that return air ducting or grills have a free area equal to the size of the return duct connection.

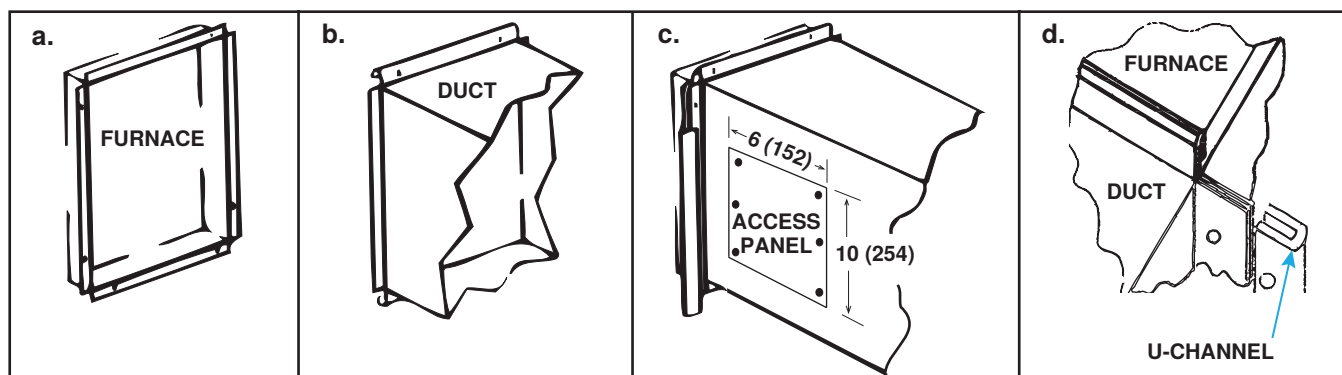


Figure 5. Connecting Ductwork to Furnace

INSTALLATION—CONTINUED

Duct Connections—Continued

100% Outside Air Hood (Option AS2)

⚠ CAUTION ⚠

It is recommended that the inlet to the outside air hood NOT be facing into the prevailing wind. Allow a minimum clearance of 14 inches (356 mm) from the bottom of the air hood to the mounting surface.

Option AS2 is a weatherized, screened hood designed to be field-assembled and installed around the horizontal inlet air opening of the blower cabinet. The air hood includes factory-assembled louvers designed to help eliminate moisture from the inlet air. Complete installation instructions are packaged with the air hood.

Screened Air Hood for 30% Outside Air Opening (Option AR6 or AR7)

The outside air hood included in the air inlet options that have a 30% outside air opening (options AR6 and AR7) is shipped separately for field-installation. Complete installation instructions are packaged with the air hood.

Evaporative Cooling Module (Option ECC1 or ECC2)

The evaporative cooling module is shipped separately for field-installation. Refer to the installation, operation, and maintenance instructions packaged with the module for module dimensions and weights, for field-connection of the water supply, and for necessary checks and adjustments before operating the module.

Discharge Air Temperature Sensor Installation

Depending on the gas control option, the discharge air temperature sensor is either factory- or field-installed. Field-installed sensors have one of two configurations: a sensor and mixing tube assembly or a sensor holder and junction box assembly. For units with the sensor holder and junction box assembly option, the sensor is normally installed on a bracket in the furnace discharge for shipping but it may be mounted in the cabinet leg (see [Figure 6](#)).

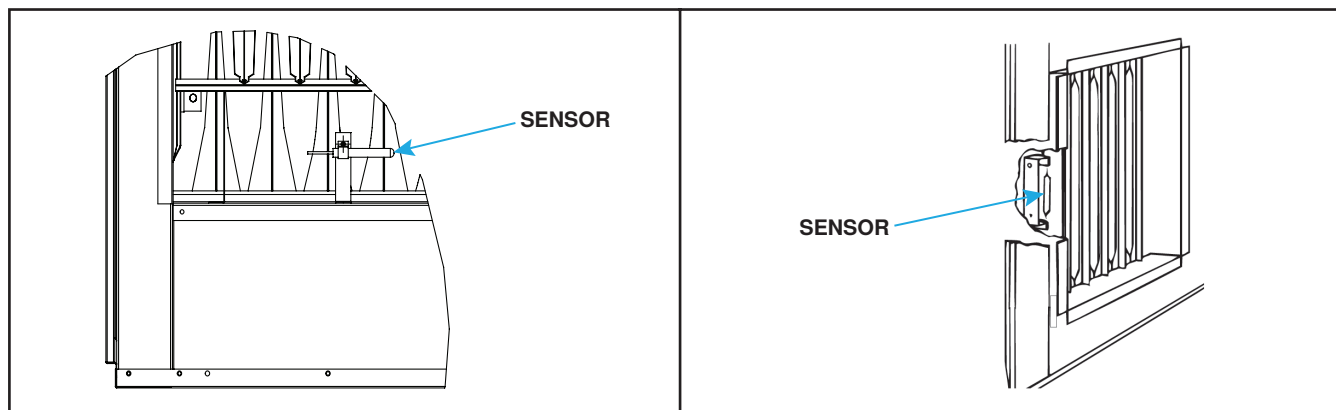


Figure 6. Shipping Locations of Capillary Sensor

NOTE: According to the latest edition of AMCA Standard 201, in straight ducts, the air is typically well mixed a minimum of five equivalent duct diameters from the discharge of the unit with equivalent duct diameter defined as equal to the square root of $4AB/3.14$ (A and B are duct cross-sectional dimensions). If the length of the discharge duct is less than 8 feet (2.4 meters), a mixing vane is recommended for mixing the discharge air. Do not mount the sensor in the ductwork after a split in the supply as this will cause loss of control in the duct that does not house the sensor.

1. Determine distance of sensor from unit:

- a. Locate the sensor a minimum of 96 inches (2,435 mm) from the outlet of the unit. Ensure that there is sufficient distance from outlet to have good mixture of discharge air temperature.
- b. Refer to following formula for calculating sensor placement—this assumes cross-sectional dimensions for supply ductwork of 24 × 12 inches (610 × 305 mm):

$$5 \text{ equivalent duct diameters} \times \sqrt{\frac{4 \times 12 \times 24}{3.14}} = 96 \text{ inches}$$

$$5 \text{ equivalent duct diameters} \times \sqrt{\frac{4 \times 305 \times 610}{3.14}} = 2435 \text{ millimeters}$$

2. Determine orientation of sensor:

- a. In horizontal ductwork, position sensor in top-middle of duct with sensor probe extending vertically down into center of air stream.
- b. In vertical ductwork, position sensor in middle of duct that corresponds with top-middle of discharge outlet.

NOTE: Position of sensor in duct is important—mixing tube is 12 inches (305 mm) long and sensor holder extends 9-3/16 inches (233 mm) into ductwork.

3. Secure sensor in ductwork:

- a. For units with sensor and mixing tube assembly (see [Figure 7](#)), remove ductwork access panel, slide mixing tube into ductwork, and secure sensor.

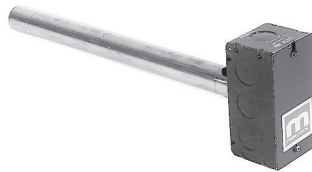


Figure 7. Sensor and Mixing Tube Assembly

NOTE: For the capillary sensor, select a ductwork location so that the minimum length of capillary tubing will be inside the ductwork. Because the sensor is larger than the tubing, a gasket and gasket retainer plate are provided to plug the hole and to protect the capillary tubing where it passes through the ductwork. Two field-supplied sheet metal screws are needed to secure the plate.

- b. For units with sensor holder and junction box assembly option (see [Figure 8](#)):

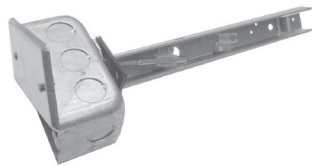


Figure 8. Sensor Holder and Junction Box Assembly

- (1) Before connecting ductwork to furnace, remove capillary sensor from its shipping position on furnace (see [Figure 6](#)).

INSTALLATION—CONTINUED

Duct Connections—Continued

Discharge Air Temperature Sensor Installation—Continued

- (2) At selected ductwork location, mark and cut 1/2-inch hole that will be sealed with gasket and retainer plate (see [Figure 9](#)). Push sensor and capillary tubing through hole.

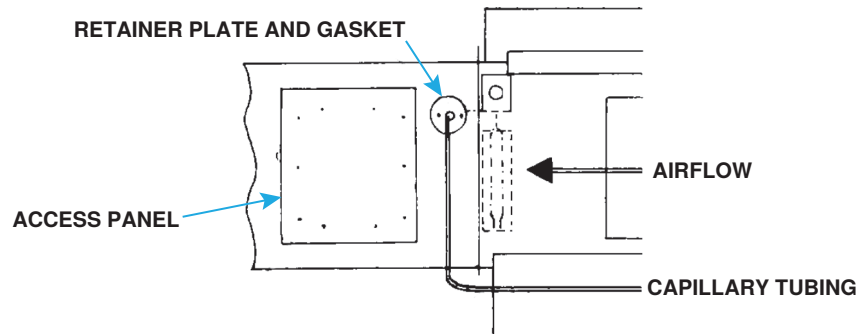


Figure 9. Capillary Sensor Installation

- (3) Remove ductwork access panel (see [Figure 9](#)) and install sensor in sensor holder so that it senses air temperature as it flows through holes in holder.
- (4) Position sensor holder and junction box assembly inside ductwork so that sensor will be shielded from direct airflow and secure junction box to ductwork using four field-supplied #6 sheet metal screws.
- (5) Slide gasket (cut slit) and retainer plate over capillary tubing. With gasket next to ductwork, install hole retaining plate and secure using field-supplied sheet metal screws.
- (6) Close ductwork access panel.

NOTE: Ensure that all sensor wires are connected in accordance with the wiring diagram provided with the unit.

4. Connect sensor wire(s)—for units with sensor holder and junction box assembly, remove junction box knockout and connect sensor wire using field-supplied cable connector secured to box.

Vent Connections

Locate power-vented furnaces so that flue discharge is not directed at fresh air inlets. The screened flue gas outlet and combustion air inlet (see [Figure 10](#)) are located on the side of the furnace just above the control access panel. The position of this opening discourages recirculation of combustion products and provides for furnace operation in all normal weather conditions.

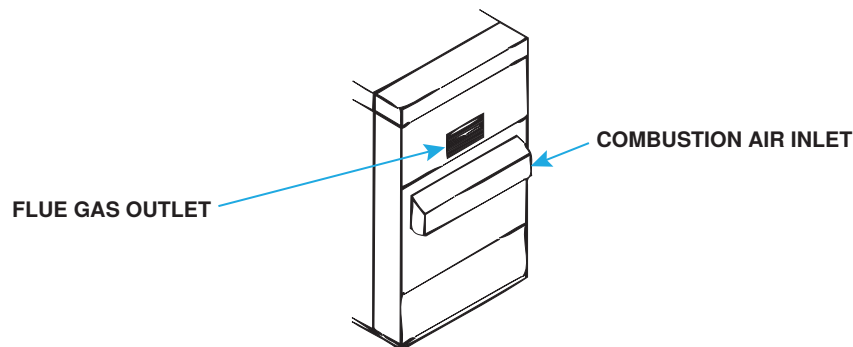


Figure 10. Flue Gas Outlet and Combustion Air Inlet

Piping Connections

Gas Supply Pressure

- The unit is equipped for a maximum gas supply pressure of 1/2 psi, 3.5 kPa, or 14 IN WC for natural gas or propane. The minimum supply pressure, as measured while the unit is operating at full fire, is 5 IN WC for natural gas or 11 IN WC for propane.
- Supply pressure higher than 1/2 psi requires the installation of an additional service regulator external to the unit.
- **Pressure testing supply piping:** For test pressures **above** 1/2 psi, disconnect the heater and manual valve from the gas supply line to be tested and cap or plug the supply line. For test pressures **below** 1/2 psi, before testing, close the manual valve on the heater.

Gas Supply Piping

DANGER

- **All components of a gas supply system must be leak tested prior to placing equipment in service. NEVER TEST FOR LEAKS WITH AN OPEN FLAME. Failure to comply could result in personal injury, property damage, or death.**
- **Pipe joint compounds (pipe dope) shall be resistant to the action of liquefied petroleum gas or any other chemical constituents of the gas being supplied.**

CAUTION

- **All piping must be in accordance with requirements outlined in the *National Fuel Gas Code* (ANSI/Z223.1, latest edition) or the *Natural Gas and Propane Installation Code* (CSA B149.1, latest edition).**
 - **Gas supply piping installation shall conform with good practice and with local codes.**
 - **Support gas piping with pipe hangers, metal strapping, or other suitable material. DO NOT rely on the heater to support the gas pipe.**
- The unit is orificed for operation with natural gas having a heating value of 1,000 (±50) BTU per cubic foot or with propane gas having a heating value of 2,550 (±100) BTU per cubic foot. Sizing of gas supply lines depends on piping capacity and is based on cubic feet per hour based on a 0.3 IN WC pressure drop, a 0.6 specific gravity for natural gas at 1,000 BTU per cubic feet, and a 1.6 specific gravity for propane at 2,550 BTU per cubic feet. If the gas at the installation does not meet this specification, consult the factory for proper orificing.
 - Variables for sizing gas supply lines are listed in [Table 9](#). When sizing supply lines, consider the possibility of future expansion and increased requirements. Refer to the *National Fuel Gas Code* for additional information on line sizing.

INSTALLATION—CONTINUED

Piping Connections—Continued

Gas Supply Piping—Continued

Table 9. Gas Supply Line Sizes										
Pipe Length (Feet)	Natural Gas					Propane				
	Pipe Diameter (Inches)									
	1	1-1/4	1-1/2	2	2-1/2	1	1-1/4	1-1/2	2	2-1/2
	Cubic Feet per Hour									
20	350	730	1100	2100	3300	214	445	671	1281	2013
30	285	590	890	1650	2700	174	360	543	1007	1647
40	245	500	760	1450	2300	149	305	464	885	1403
50	215	440	670	1270	2000	131	268	409	775	1220
60	195	400	610	1105	1850	119	244	372	674	1129
70	180	370	560	1050	1700	110	226	342	641	1037
80	170	350	530	990	1600	104	214	323	604	976
90	160	320	490	930	1500	98	195	299	567	915
100	150	305	460	870	1400	92	186	281	531	854
125	130	275	410	780	1250	79	168	250	476	763
150	120	250	380	710	1130	73	153	232	433	689
175	110	225	350	650	1050	67	137	214	397	641
200	100	210	320	610	980	61	128	195	372	598

Supply Piping Connections

NOTE: The *National Fuel Gas Code* requires the installation of a minimum 3-inch sediment trap with a drip leg. Local codes may require a sediment trap longer than 3 inches (typically 6 inches). To permit burner removal, this sediment trap must extend beyond the edge of the heater.

Connect the gas supply piping as follows (see [Figure 11](#) and [Figure 12](#)):

1. Make gas connection (refer to [Table 10](#) for gas connection sizes) at pipe nipple that extends outside cabinet using ground joint union.
2. Seal opening for gas supply pipe with grommet provided.
3. Install manual shutoff valve upstream of unit control system. Manual shutoff valve's 1/8-inch plugged tapping provides connection for supply line pressure test gauge.
4. Install minimum 3-inch sediment trap (typically 6 inches).
5. Bleed trapped air from gas lines as needed.
6. Leak test all connections using leak detecting solution.

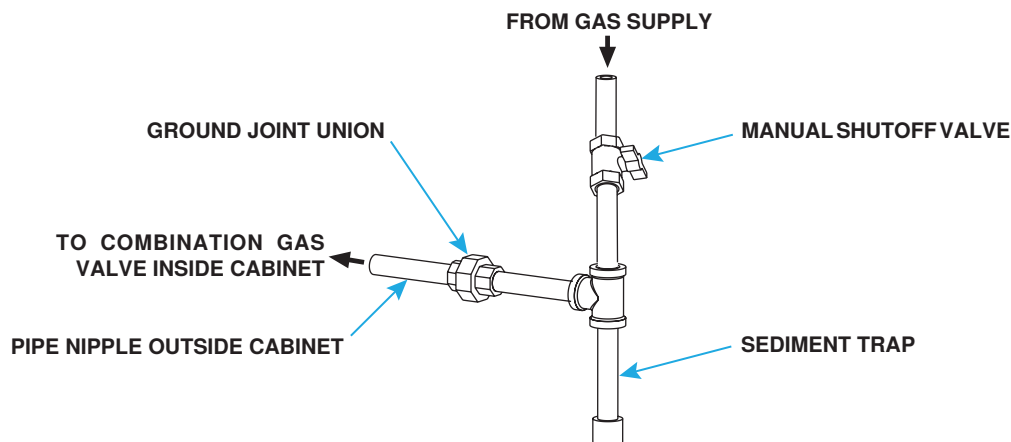


Figure 11. Gas Connections

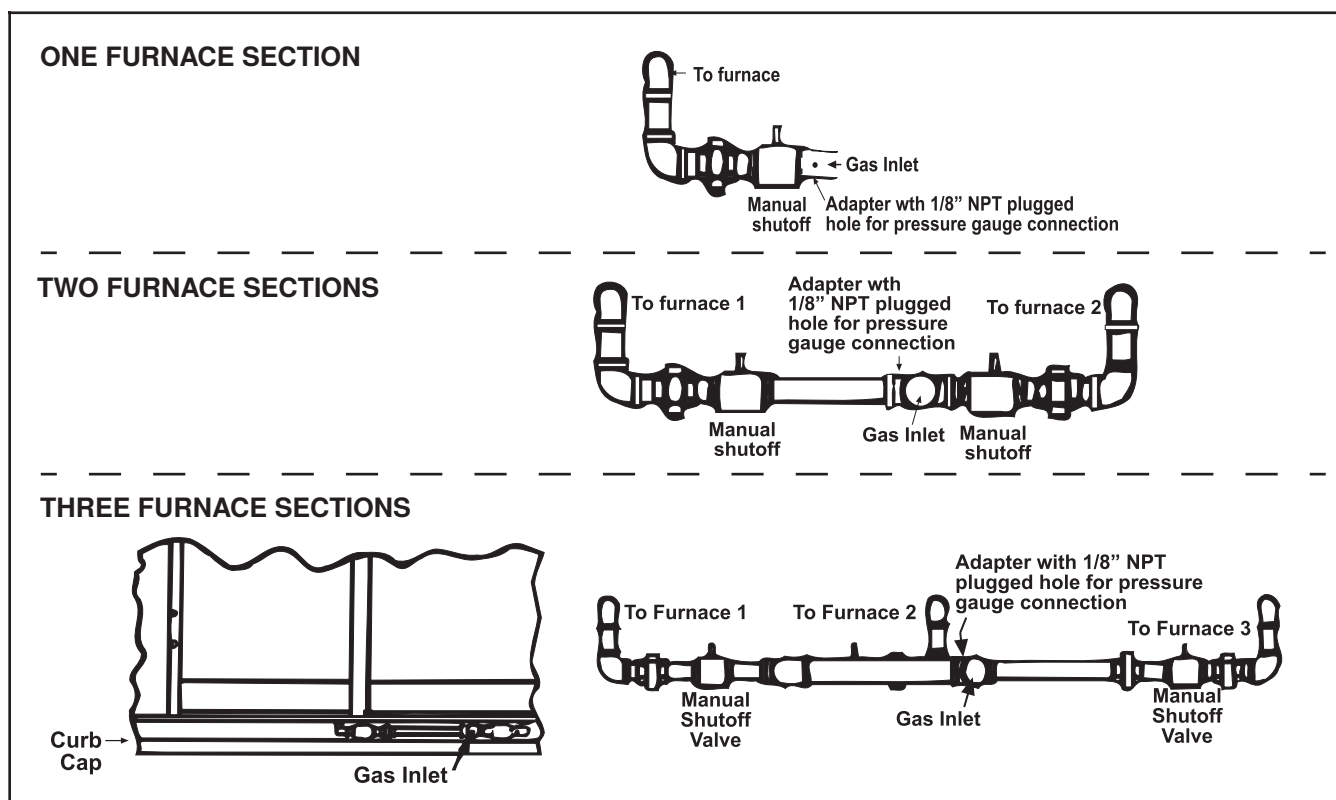


Figure 12. Gas Manifold Arrangements

Table 10. Gas Connection Sizes	
Unit Size (MBTUh)	
400	500–1200
Connection Size (Inches (mm))	
1 (25)	1-1/4 (32)

NOTE: The above are not supply line sizes. They are gas connection sizes for a standard unit.

Electrical Connections

⚠ CAUTION ⚠

- Ensure that all wiring is in accordance with the wiring diagram provided with the unit. Electrical options are identified on this wiring diagram. Refer to separate instruction sheets for any optional equipment provided.
- All electrical wiring and connections, including electrical grounding **MUST BE** made by a qualified electrician in strict accordance with the *National Electric Code* (ANSI/NFPA No. 70, latest edition) or, in Canada, the *Canadian Electric Code* (Part 1, CSA C.22.1). In addition, the installer should be aware of any local ordinances or gas company requirements that might apply.
- If any of the original wire as supplied with the appliance must be replaced, it must be replaced with wiring material having a temperature rating of at least 220°F (105°C), except for the sensor lead wires, which must be rated at 302°F (150°C).
- All external wiring **MUST BE** within approved conduit and **MUST HAVE** a minimum temperature rise of 140°F (60°C).
- Keep electric and gas supply components clear of service panels.

INSTALLATION—CONTINUED

Electrical Connections—Continued

Supply Wiring Connection

- Check the rating plate on the heater for the supply voltage and current requirements and ensure that all wiring is in accordance with the wiring diagram provided with the unit.
- Route supply wiring to electrical connection location shown in [Figure 1](#).
- A separate line voltage supply with fused disconnect switch should be run directly from the main electrical panel to the unit, making connections in the junction box.

Control Wiring Connections

- Route control wiring to control connection location shown in [Figure 1](#).
- **Convenience outlet:** When a convenience outlet (option BC) is included, a separate power supply must be provided to the receptacle. This circuit **MUST** BE on a ground fault breaker to meet requirements.
- **Disconnect switch:** A disconnect switch is a required part of this installation. Switches are available as options or parts or may be supplied locally. When ordered as an optional component, the disconnect switch may be factory installed or shipped separately to be field-installed. The disconnect switch may be fusible or non-fusible. When providing or replacing fuses in a fusible disconnect switch, use dual element time delay fuses and size according to $1.25 \times$ maximum total input amps. Ensure that the conduit and switch housing are clear of furnace panels and inspection plates. Allow at least 4 feet (1.2 meters) of service room between the switch and removable panels. Refer to [Table 11](#) for field-supplied wiring sizes—from disconnect to electrical box—for connection to the motor contactor or starter.
- Refer to [Table 12](#) for amp ratings of optional controls. Refer to [Table 13](#) for the recommended maximum length and minimum gauge of control wiring.

Table 11. Field-Supplied Wiring Sizes

Voltage/Phase	Motor HP	Wire Gauge	BX Cable Size (Inches)
208/1, 230/1	1–2	14	3/8
	3	10	1/2
	5	8	
	7.5	6	1
	10	4	
208/3, 230/3	1–3	14	3/8
	5	12	1/2
	7.5	10	
	10	8	
	15	6	1
	20	4	
460/3	1–7.5	14	3/8
	10	12	1/2
	15	10	
	20	8	
575/3	1–7.5	14	3/8
	10–20	10	1/2

Table 12. Amp Ratings of 24V Optional Controls

Control	Ampere Rating (Maximum Amps)
Fan control	0.12
Heater	0.14
RBM relay coil	2.00
Contactor coil	0.45
Spark ignition system	0.10
Maxitrol gas control system	0.51
Single-stage gas valve	0.60
Two-stage gas valve	0.60

Table 13. Control Wiring Sizes		
Distance from Unit to Control (Feet (Meters))	Minimum Recommended Wire Gauge (AWG)	Total Wire Length (Feet (Meters))
75 (23)	#18	150 (46)
125 (38)	#16	250 (76)
175 (53)	#14	350 (107)

CONTROLS

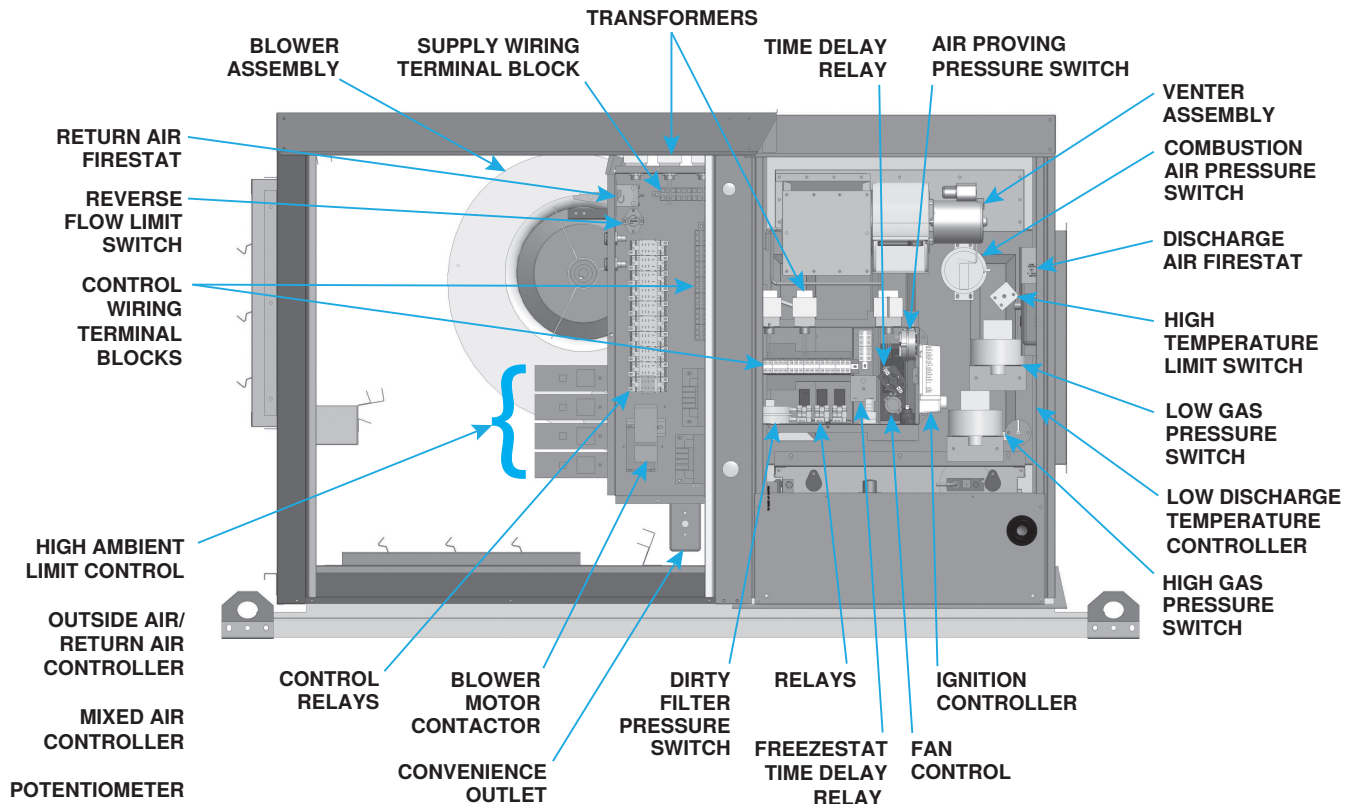


Figure 13. Typical Component Locations

Standard Controls

Combustion Air Proving Switch

⚠ DANGER ⚠

Safe operation requires proper venting flow. Never bypass the combustion air proving switch or attempt to operate the unit without the venter running and proper flow in the vent system. Hazardous conditions could result.

- The combustion air proving switch ensures that proper combustion airflow is available. The switch is a single-pole, double-throw switch that senses pressure caused by the flow of combustion air from the venter. The switch is designed to close when a decreasing pressure is sensed in the outlet duct of the gas collection box.
- At startup when the furnace is cold, the sensing pressure is at the most negative level. As the furnace and the flue system warm up, the sensing pressure becomes less negative. After the system has reached equilibrium (approximately 20 minutes), the sensing pressure levels off. If a restriction or if excessive flue length or turns cause the sensing pressure to become less than the switch setpoint, the pressure switch will function to shut off the main burners. The main burners will remain off until the system has cooled and/or the flue system resistance is reduced. Refer to [Table 14](#) for approximate water column negative pressure readings and combustion air proving switch setpoints for sea level operating conditions.

CONTROLS—CONTINUED

Standard Controls—Continued

Combustion Air Proving Switch—Continued

Table 14. Combustion Air Proving Switch Settings at Sea Level Operating Conditions			
Unit Size (MBTUh)	Factory Setpoint	Startup Cold	Equilibrium
Units Without Option AG39, AG40, AG41, or AG42			
All	-0.63 (± 0.05) IN WC	-1.00 IN WC	-0.70 IN WC
Units with Option AG39, AG40, AG41, or AG42			
400, 500, 600, 800, 1200	-0.75 (± 0.05) IN WC	-1.20 (± 0.20) IN WC	-0.95 (± 0.10) IN WC

Blower Fan Control

NOTE: To replace the blower fan control on units manufactured before NOV 2004, a replacement kit (PN 209184) is required.

The blower fan is controlled as follows:

- After the gas valve opens, there is a time delay of blower fan operation to prevent the discharge of cold air.
- Blower fan operation continues after the thermostat is satisfied, as determined by the fan time delay.
- To ensure that the blower fan can continue to operate, the power supply to the furnace MUST NOT be interrupted except for when servicing the unit.

NOTE: If the customer wants the furnace off at night, the gas valve circuit SHOULD BE OPENED by a single-pole switch wired in series with the thermostat. Some thermostats are provided with this feature. Multiple units controlled from a single thermostat are shut off in the same manner. For proper operation, ensure that the blower fan control is wired correctly.

High Temperature Limit Switch

Each furnace is equipped with a non-adjustable high temperature limit switch that shuts off the gas in the event of motor failure, lack of air due to dirty filters, or restrictions at the inlet or outlet of the unit. The furnace farthest downstream in each system is also equipped with a linear-type limit control. The switch is mounted on a bracket on the bottom of the junction box with the capillary sensor extending across the discharge opening of the furnace.

Reverse Flow Limit Switch

The furnace is factory-equipped with an automatic-reset reverse flow limit control. This control is located in the blower compartment, is mounted in the blower junction box adjacent to the blower inlet opening, and is wired in series with the main limit control mounted on the heat exchanger duct side. In case of belt breakage or motor failure, the limit control will be opened by the high temperatures caused by reverse flow from the heat exchanger to the blower compartment, thus breaking the circuit to the automatic electric gas valve and preventing burner operation.

Combination Gas Valve

WARNING

The combination gas valve is the prime safety shutoff. To ensure positive closure, all gas supply lines must be free of dirt or scale before connecting them to the unit.

All furnaces are equipped with a 24V combination gas valve that includes the automatic electric ON/OFF valve controlled by the room thermostat, the pressure regulator, the safety pilot valve, and the manual shutoff valve. The standard combination gas valve allows for single-stage control from a single-stage, 24V thermostat.

⚠ WARNING ⚠

Due to high voltage on the pilot spark wire and pilot electrode, do not touch when energized.

- **Pilot:** The pilot (see [Figure 14](#)) is a vertical target type with lint-free feature. Pilot flame should be approximately 1-1/4" in length. Pilot gas pressure should be the same as supply line pressure (refer to [Gas Supply Pressure](#) section). Pilot gas is supplied through the combination valve; the pilot gas flow is controlled by an adjustment screw located in the valve body.

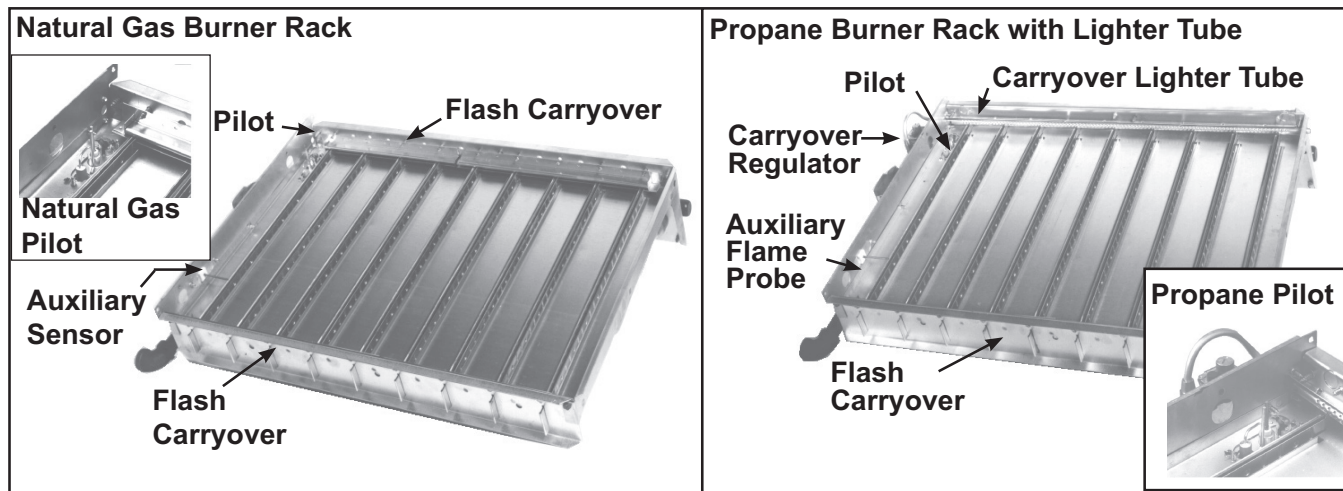


Figure 14. Typical Burner Rack with Pilot

- **Ignition system:** Natural gas units are equipped with a spark-ignited intermittent safety pilot system that shuts off pilot gas flow between heat cycles. Propane units (or as an option on natural gas units) require a lockout device that stops gas flow to the pilot if the pilot fails to light in 120 seconds. This lockout device has a 1-hour retry or requires a manual reset by interruption of the thermostat circuit. Refer to the wiring diagram provided with the unit for pilot system identification and for proper wiring. Spark pilot without lockout is designated as option AH2 or pilot with lockout is option AH3.
- **Ignition controller:** As part of the intermittent safety pilot system, the ignition controller provides high voltage spark to ignite pilot gas and also acts as the flame safety device. After ignition of the pilot gas, the ignition controller electronically senses the pilot flame. A low voltage DC electrical signal is imposed on the separate metal probe in the pilot assembly. The metal probe is electrically insulated from ground. The pilot flame acts as a conduction path to ground to complete the DC circuit and prove pilot flame. Proper operation of the electronic spark ignition system requires a minimum flame signal of 0.2 microamps, as measured by a microammeter. With pilot flame proven, the ignition controller energizes the main gas valve.

Burners and Carryover System

- **Burners:** These duct furnaces have individually-formed steel burners with accurately die-formed ports to provide controlled flame stability without lifting or flashback with either natural or propane gas. All burners are lightweight and are factory-mounted in an assembly that permits all of the burners to be removed as a unit for inspection or service. During regular service, check the main burner ports and the orifices for cleanliness.

CONTROLS—CONTINUED

Standard Controls—Continued

Burners and Carryover System—Continued

NOTE: Natural gas burner racks (except when equipped with electronic modulation option AG39, AG40, AG41, or AG42) are equipped with two flash carryovers. Propane gas burners are equipped with one flash carryover and a regulated gas lighter tube system. The carryover lighter tube receives its gas supply through a regulator, simultaneously with the gas to the burner orifices. Heaters are shipped with orifices of proper size and type for gas specified. Natural gas units do not require a carryover orifice.

- **Carryover system:** During regular service, check the carryover system for cleanliness.

Optional Controls

NOTE: Refer to the wiring diagram provided with the unit for proper wiring connections.

Two-Stage Heating Control (Options AG2 and AG11)

The standard combination control valve is replaced with a two-stage combination gas control valve providing for low fire or high fire operation controlled by a two-stage thermostat. The first stage (low fire) is factory-set (not field-adjustable). Both low fire and high fire stages are controlled by a Servo regulator that maintains constant gas input under wide variations in gas supply pressure. Refer to the gas valve literature provided with the unit for gas valve specifications, wiring, and operating instructions.

Two-Stage Makeup Air Control (Options AG3, AG15, and AG17)

NOTE: If the unit has an optional remote HEAT/COOL switch, ensure that HEAT is selected.

On systems with more than one furnace section, there are two methods of achieving multiple-stage makeup air operation. In addition, for each of these methods, there are two types of control mechanisms. The first method is comparable to the two-stage heating units. Instead of control from a two-stage room thermostat, the discharge air temperature is monitored and the two-stage gas valve is controlled by a two-stage ductstat. When the discharge air temperature drops to the setpoint, low fire is energized. If low fire cannot satisfy the ductstat setting, high fire is energized. As the packaged system may include two or three furnace sections, and as each section is equipped with a two-stage gas valve, the operation stages increase with the number of furnace sections. The second method of multiple-stage makeup air operation is applicable only to systems that include two furnace sections. On systems with two furnaces, this optional control system is identified as option AG17. Each furnace in the package is equipped with a single-stage gas valve. The single-stage gas valves are staged by two-stage ductstats. The furnaces are staged in sequence. This concept will achieve two-stage control on packaged systems with two furnaces and three-stage control on systems with three furnaces. Makeup air applications are usually adjusted to maintain discharge air temperature between 65°F (18.3°C) and 75°F (23.9°C). In all applications, the allowable temperature rise of the furnace in the installation dictates the limits of the ductstat temperature setting. Depending on the option selection, the sensor is either connected by capillary tubing to the unit-mounted ductstat or electrically-connected to a remote temperature selector. Refer to the [Discharge Air Temperature Sensor Installation](#) section for instructions on locating the sensor in the ductwork. Set the ductstat as indicated in [Table 15](#).

Table 15. Recommended Settings for Two-Stage Makeup Air Control									
Option	No. of Furnaces	Ductstat Setting*					Temperature Selector Setting**		
		1st	2nd	3rd	4th	Staging Sequence	Setpoint	Differential	Stage Adder Offset
AG3	1	70°F	—			66°F high stage→70°F low stage→74°F shutdown	—	—	—
	2	70°F	64°F	—		60°F high stage (both furnaces)→64°F low stage (furnace 2)→68°F shutdown (furnace 2)→70°F low stage (furnace 1)→74°F shutdown (furnace 1)			
	3	70°F	66°F	62°F	—	58°F high stage (all furnaces)→62°F low stage (furnace 3)→66°F shutdown (furnace 3), low stage (furnace 2)→70°F shutdown (furnace 2), low stage (furnace 1)→74°F shutdown (furnace 1)			
AG15	1	—					74°F	8°F	4°F
	2	—					74°F	14°F	10°F, 6°F, 4°F
	3	—					74°F	16°F	10°F, 8°F, 8°F, 4°F, 4°F
AG17	2	—					74°F	8°F	4°F

*Set each ductstat control in furnace order.

**Adjust the setpoint and the differential of the temperature selector (Johnson #A350). Adjust the offset potentiometer on each of the stage adder modules (Johnson #S350). Follow the manufacturer's instructions provided.

- **Ductstat with capillary tubing (option AG3):** The unit-mounted ductstat (see [Figure 15](#)) has an adjustable range of 0°F to 100°F (−17.8°C to 37.8°C) with a fixed differential of 3°F (1.7°C). The sensor is factory-set at 70°F (21.1°C). Due to different CFM settings and outside air temperatures, the average downstream outlet temperature may not match the ductstat setting exactly. After the installation is complete, adjust the setpoint of the ductstat to achieve the desired average outlet air temperature.

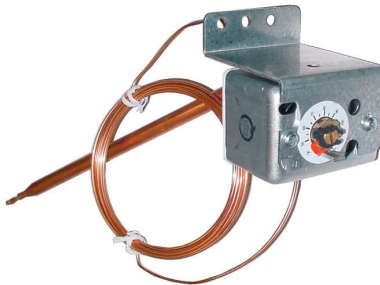


Figure 15. Unit-Mounted Ductstat

- **Ductstat with electronic remote temperature selector (options AG15 and AG17):** Follow the wiring diagram provided with the unit and the manufacturer's instructions for wiring and installing the WiFi-capable remote temperature selector (see [Figure 16](#)). An expansion module is available as needed. After the installation is complete, adjust the selector to achieve the desired average outlet air temperature.



Figure 16. Ductstat Options

CONTROLS—CONTINUED

Optional Controls—Continued

Electronic Modulation (Options AG7, AG8, AG9, AG21, AG39, AG40, AG41, and AG42)

NOTE: Unit sizes 400, 700, 800, 1050, and 1200 with electronic modulation require a minimum natural gas supply pressure of 6 IN WC. Options AG39, AG40, AG41, and AG42 are available only with natural gas. A unit size 400 equipped with electronic modulation option AG39 has a 25–100% firing range (4:1 turndown ratio). Option AG41 applies to unit sizes 500, 600, and 800 with two furnaces and to unit size 1200 with three furnaces.

The type and capability of the electronic modulation system depends on the option selected. Depending on the heat requirements established by the thermistor sensor, the burner modulates between 100% and 50% firing. The thermistor is a resistor that is temperature-sensitive in that as the surrounding temperature changes, the Ohms resistance changes through the thermistor. This change is monitored by the solid-state control center (amplifier) that furnishes varying DC current to the modulating valve to adjust the gas input. Each modulating valve is basically a regulator with the electrical means of raising and lowering the discharge pressure. When no DC current is fed to this device, it functions as a gas pressure regulator to supply 3.5 IN WC pressure to the combination gas valve. Refer to the [Discharge Air Temperature Sensor Installation](#) section for instructions on locating the sensor in the ductwork.

- **Electronic modulation between 50% and 100% firing rate (option AG7):** Electronic modulation for heating that is controlled by a specially-designed room thermostat (60–85°F (15.6–29.4°C)).
- **Electronic modulation between 50% and 100% firing rate (option AG8):** Electronic modulation for makeup air application that is controlled by a duct sensor and temperature selector (55–90°F (12.8–32.2°C)). The temperature selector setting is on the amplifier (see [Figure 17](#)). Option AG8 is available with an override thermostat.

NOTE: Control wires connected to a Selectrastat, a discharge air sensor, a remote temperature selector or sensor, an amplifier, or the valve must not be run close to or inside conduit with power or ignition wires. Doing so may cause the unit to function erratically or may destroy the amplifier. If shielded wires are used, shield must be insulated and grounded at the amplifier location only.

- **Electronic modulation between 50% and 100% firing rate (option AG9):** Electronic modulation for makeup air application that is controlled by a duct sensor and temperature selector (55–90°F (12.8–32.2°C)). Option AG9 has a remote temperature selector and an override thermostat.

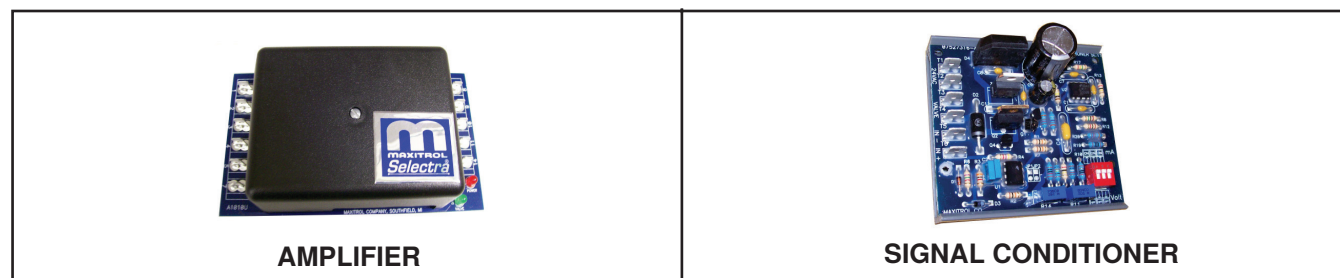


Figure 17. Maxitrol Amplifier and Signal Conditioner

- **Electronic modulation between 50% and 100% firing rate (option AG21):** With option AG21, the furnace is equipped with a Maxitrol signal conditioner (see [Figure 17](#)) that operates much the same way as the amplifier above to control the regulator valve. The signal conditioner accepts an input signal of either 4–20 milliamps or 0–10V from a customer-supplied control device such as a computer. With the dip switches on the conditioner positioned to ON, the conditioner accepts a 4–20 milliamp signal. With the dip switches on the conditioner positioned to OFF, the conditioner accepts a 0–10V signal. The conditioner converts the signal to the 0–20V DC current required to control the modulating valve.

- **Electronic modulation between 25% and 100% firing rate (options AG39 and AG41):** The furnace closest to the blower is equipped with the electronic modulation option. The other furnace(s) have two-stage burner control from outside air temperature sensors identified as heat stage controllers. Option AG41 provides 6:1 turndown with two furnaces and 8:1 turndown with three furnaces. The gas supply (refer to pressure requirements in [Table 16](#)) connects to the single-stage gas valve. To compensate for additional pressure loss through the modulating valve, the single-stage gas valve has a custom outlet pressure setting higher than when it is used on a standard gas manifold. The pilot tubing connects to the pilot port on the single-stage gas valve. The furnace will ignite at any input rate in the available range and will maintain average thermal efficiencies equal to or greater than the thermal efficiency at full fire. The gas train (see [Figure 18](#)) includes a single-stage gas valve, a modulating valve, and two gas pressure switches. The burner rack is equipped with one flash carryover and a regulated gas lighter tube system. The carryover lighter tube receives its gas supply through the regulator simultaneously with the gas to the burner. Control of the system is through a Maxitrol amplifier (see [Figure 17](#)) with a corresponding remote temperature dial. When the valve receives a call for heat from the amplifier and pilot is established, gas flow from the single-stage valve goes to both the modulating valve and the regulated lighter tube system. When the signal from the amplifier to the modulating valve requires less-than-high fire operation, the modulating valve functions to lessen the gas flow to the burner to reduce the input rate to that which is necessary to maintain the desired temperature. When the input rate is reduced enough to decrease the gas pressure to 1.1 IN WC, the primary gas pressure switch in the manifold activates the gear motor that controls the bypass damper in the venter/combustion air system. The bypass damper opens to divert some of the incoming air directly into the flue duct to reduce air flow through the burner. Safety switches monitor the position of the bypass damper. When the gas pressure rises to > 1.1 IN WC, the bypass damper closes. Although the sensor has a mixing tube, at this distance from the discharge it does not receive a true mix, so the temperature read by the sensor will be slightly higher than the actual air entering the ductwork. The system will provide comfort level heat if the selector is set slightly lower to compensate for this reading. The offset temperature will vary with the application. If a direct correlation of these two temperatures is required, move the duct sensor to a location in the ductwork about 10–12 feet (3–3.7 meters) from the furnace discharge. This uniquely-designed modulation system requires combustion air pressure settings different from the standard system. Refer to [Table 14](#) for the approximate combustion air proving switch settings at sea-level operation. Refer to [Table 16](#) for pressure requirements. Refer to the [Troubleshooting Bypass Combustion Air Damper Safety Circuit on Units with Option AG39, AG40, AG41, or AG42](#) section for troubleshooting.

Table 16. Options AG39, AG40, AG41, and AG42 Pressure Requirements				
Unit Size (MBTUh)	Maximum Turndown (%)	Input Range (MBH)	Factory-Set Inlet Pressure to Modulating Valve (IN WC)	Required Gas Supply Pressure (IN WC)
500	28	69–250	4.0	5.0
600	23	69–300	4.0	5.0
400, 800, 1200	25	100–400	4.4	6.0

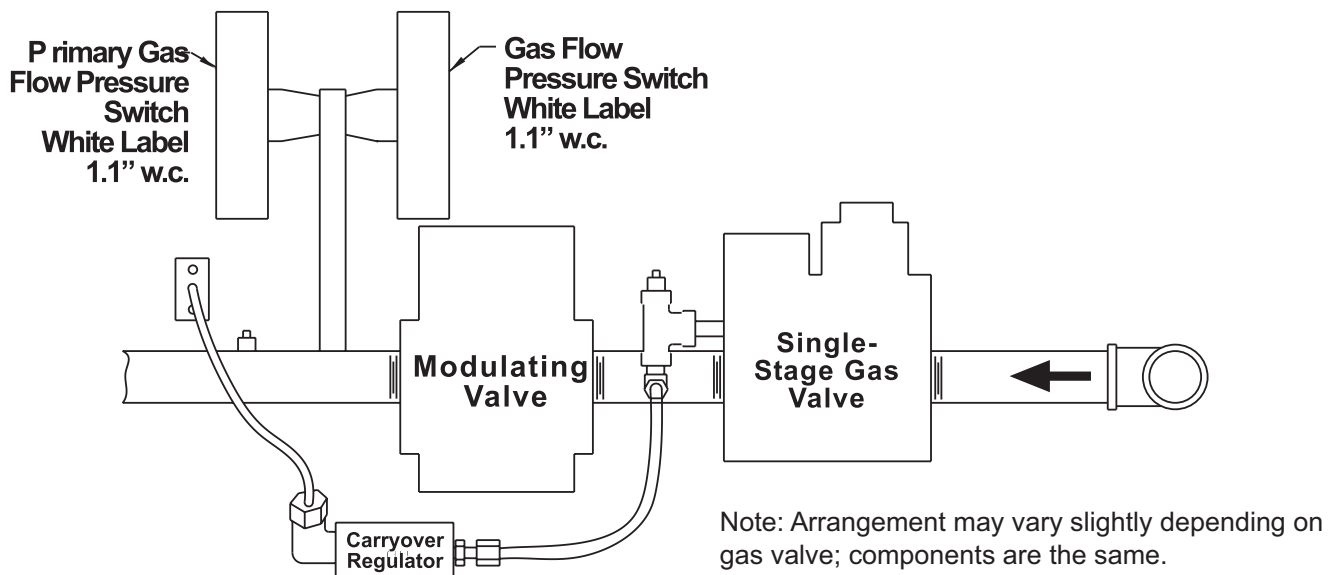


Figure 18. Typical Manifold Arrangement with Electronic Modulation

CONTROLS—CONTINUED

Optional Controls—Continued

Electronic Modulation (Options AG7, AG8, AG9, AG21, AG39, AG40, AG41, and AG42)—Continued

- **Electronic modulation between 25% and 100% firing rate (options AG40 and AG42):** The furnace is equipped with a Maxitrol signal conditioner (see [Figure 17](#)) that receives an input signal of either 4–20mA or 0–10V from a customer-supplied control device such as a computer. With the dip switches on the conditioner positioned to ON, the conditioner accepts a 4–20mA signal. With the dip switches on the conditioner positioned to OFF, the conditioner accepts a 0–10V signal. The conditioner converts the signal to the 0–20V DC current required to control the modulating valve. The furnace functions and is equipped in the same way as options AG39 and AG41 except that with computer control, the temperatures are selected through the software and there is no temperature selector or duct sensor. This uniquely-designed modulation system requires combustion air pressure settings different from the standard system. Refer to [Table 14](#) for the approximate combustion air proving switch settings at sea-level operation. Refer to [Table 16](#) for pressure requirements. Refer to the [Troubleshooting Bypass Combustion Air Damper Safety Circuit on Units with Option AG39, AG40, AG41, or AG42](#) section for troubleshooting.

Dampers and Damper Controls (Options AR1, AR4, AR6, AR7, AR8, AR15, AR17, AR18, AR23, and AR25)

- For specific damper control options (see [Figure 19](#)), refer to the wiring diagram provided with the unit. To adjust dampers, refer to the [Damper Linkage Adjustment](#) section.

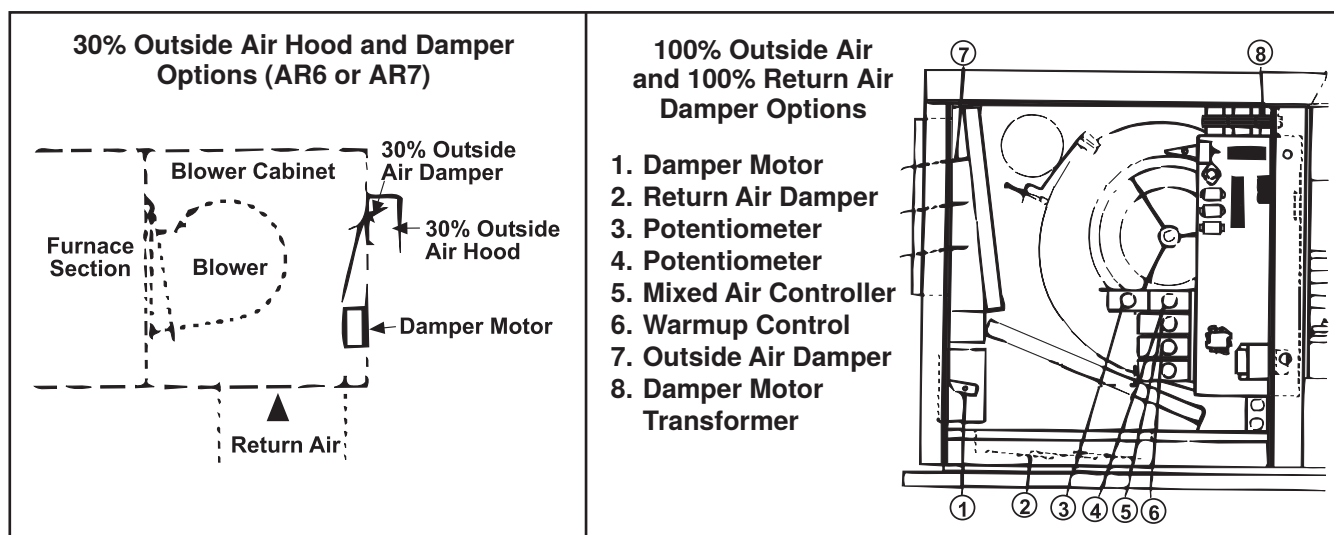


Figure 19. Damper Controls

- The pressure null switch used to control outside air dampers in inlet air option AR23 is a Dwyer #1640-0 with a range of 0.01–0.20 IN WC. It is shipped separately for field installation—refer to the manufacturer’s installation instructions included with the switch. The pressure null switch is a diaphragm-operated differential pressure switch used in makeup air applications to control building pressure. It maintains a selected positive or negative pressure setpoint by changing the amount of outside air being introduced to the building through the modulating outside air dampers. As more pressure is required in the building, the pressure null switch activates the damper motor driving the outside air damper towards the full open position and the recirculated air damper towards the closed position. Conversely, as less pressure is required, the switch drives the dampers in the opposite direction. Install the switch as follows:
 - a. Select indoor location free from excessive vibration where oil or water will not drip onto switch and where ambient temperature is –30°F (–34.4°C) (dry air) to 110°F (43.3°C).
 - b. Mount switch with diaphragm in vertical plane. Switch is position-sensitive and is calibrated to operate properly when diaphragm is vertical. Mount switch securely.

- c. Connect pressure taps on top of switch to sources of air pressure differential. Metal tubing with 1/4-inch OD is recommended, but any tubing system that does not unduly restrict air flow may be used. To maintain positive building pressure, vent low pressure tap to outdoors and allow high pressure tap to monitor building pressure. To maintain negative building pressure, reverse functions of high and low pressure taps. In either case, ensure that outdoor vent is protected from wind and is screened from insects.
- d. Refer to wiring diagram provided with unit to make electrical connections.
- e. Adjust switch (refer to [Pressure Null Switch Adjustment](#) section).

Dirty Filter Switch (Option BE18)

The optional dirty filter pressure switch is used to provide warning to the user by energizing an indicator light on an optional remote console. The light indicates that the filters are in need of cleaning or changing. The adjustable, single-pole/normally-open differential switch closes when an increase in pressure differential above the setpoint, is sensed across the filter bank. The dirty filter switch is located in the furnace section. To adjust the dirty filter switch, refer to the [Dirty Filter Switch Adjustment](#) section.

High Ambient Limit Control (Option BN2)

The optional high ambient limit control functions to shut off the burner when the entering outside air reaches a set temperature. The temperature setting is field-adjustable from 0°F to 100°F (–17.8°C to 37.8°C).

Airflow Proving Switch (Makeup Air with Option BW1)

The optional airflow proving switch ensures that the circulating air blower provides an adequate amount of airflow prior to the unit being fired. The switch is a single-pole/normally-open device that closes when an increase in pressure above the setpoint is sensed in the circulating air blower. The switch is located in the blower junction box. Contacts are set to close at 0.26 IN WC (maximum).

Space Temperature (Option D19) or Makeup Air (Option D21) Control

Space temperature or makeup air control is achieved with a unit-mounted 24V factory-programmed system controller mounted in its own watertight compartment (see [Figure 20](#)). Some controller features are programmable (refer to the D19-D21 controls manual provided with the unit and found at www.reznorhvac.com). Some sensors are standard; others depend on option selection. If a sensor needs to be replaced, use only a factory-authorized replacement. If a controller needs to be replaced, it must be replaced with the same model and software. Contact your Distributor or Reznor service for additional support.

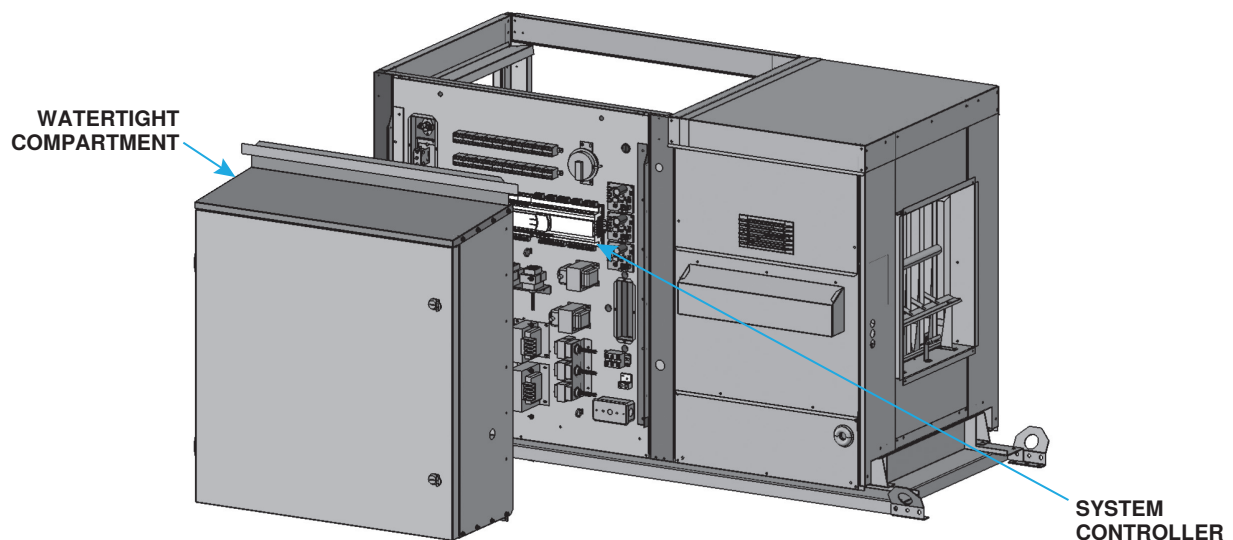


Figure 20. System Controller Used with Options D19 and D21

CONTROLS—CONTINUED

Optional Controls—Continued

Photoelectric Air Duct Smoke Detector (Option SA1)

The smoke detector (see [Figure 21](#)) is designed to sense the presence of smoke in the air duct system so that appropriate action can be taken to shut off fans and blowers to facilitate the management of toxic smoke and fire gases throughout the areas served by the duct system. The smoke detector is field-installed in accordance with the manufacturer's instructions provided with the detector.

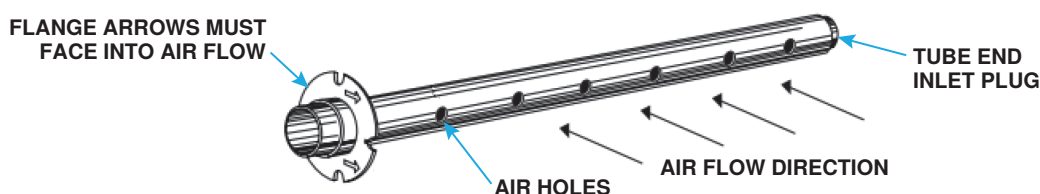


Figure 21. Air Duct Smoke Detector Sampling Tube

Variable Frequency Drive (Options VFD1 and VFD2)

- When an optional variable frequency drive is ordered, the motor operates on two speeds as determined by the electrical frequency. High speed is used for cooling and low speed for heating. 60 Hertz is the maximum high speed. Maximum speed for low speed heating is the frequency that will provide the maximum temperature rise of the heater. Speeds must be within the temperature rise range of 30–90°F (1–32°C).
- Follow the variable frequency controller manufacturer's instructions that are packaged with the heater (in the owner's envelope) to program the variable frequency drive settings. The formula for motor speed is $N = 120 \times f/p$ where N = speed, f = frequency, p = number of poles, a 3,600-rpm motor has two poles, and an 1800-rpm motor has four poles. For example, for an 1,800-rpm motor at 60Hz, $N = 120 \times 60/4 = 1800$ (1,800 = synchronous speed, assume 2% slip).
- The motor will run between 1,750 and 1,790 rpm at full load depending on design. For the same motor run at 45Hz, $120 \times 45/4 = 1350$ (1,350 rpm less 2% slip = about 1,300 rpm).

Thermostat

⚠ CAUTION ⚠

Ensure that the thermostat has an adequate VA rating for the total requirements. Add the coil rating of all relays and match the thermostat rating.

NOTE: If the low-voltage thermostat is equipped with a heat anticipator, set the anticipator at full load control amps.

- A thermostat is not standard equipment but is an installation requirement. Use either an optional thermostat available with the system or a field-supplied thermostat. Install according to the thermostat manufacturer's instructions.
- A 24V thermostat must be used to actuate low voltage gas controls. If line voltage from the thermostat to the unit is desired, consult the factory representative. Thermostats should be located 5 feet (1.5 meters) above the floor on an inside wall, not in the path of warm or cold air currents and not in corners where air may be pocketed. Do NOT install on cold air walls. For specific connection details, refer to instruction packet with the thermostat. If more than one furnace is cycled from one thermostat, separately activated relays must be substituted at unit thermostat connections.

OPERATION

WARNING

To ensure safety, follow the lighting instructions located on the outlet box cover.

Pre-Startup Checklist

- ☐ Ensure that suspension, mounting, clearances, and duct and venting connections are in accordance with **INSTALLATION** section.
- ☐ Ensure that flue discharge and combustion air openings are free from obstructions.
- ☐ Ensure that electrical entrances are sealed against the weather.
- ☐ Ensure that gas supply pipe openings are sealed.
- ☐ Ensure that electrical supply is in accordance with voltage rating on unit's rating plate.
- ☐ Ensure that all field wiring is in accordance with wiring diagram and that wire gauges are as required for electrical load.
- ☐ Ensure that fuses or circuit breakers are in place and are sized correctly.
- ☐ Ensure that clearances from combustibles are in accordance with **Clearances** sections).
- ☐ On units with option AG41 or AG42, ensure that heat stage controllers are set.
- ☐ Check blower pulley and motor pulley to ensure that they are secure to their shafts. Check belt tension and alignment. Check blower rotation (refer to **Belts, Blowers, and Drives** section).
- ☐ On units with optional dampers, ensure that damper linkage is in accordance with **Damper Linkage Adjustment** section.
- ☐ Check piping for leaks and proper gas line pressure and bleed trapped air from gas lines (refer to **Supply Piping Connections** section):
 - a. Turn OFF manual shutoff valve.
 - b. Turn ON gas supply.
 - c. Observe gas meter for movement or attach pressure gauge readable to 0.1 IN WC and, after turning gas ON for 10 seconds, turn OFF gas supply—no change in pressure should occur over 3-minute period.
 - d. If step c indicates leak, locate leak by brushing soapy solution on all fittings—bubbles will appear at any leaks.
 - e. Repair any leaks and repeat test.

Startup

1. Close all panels tightly.
2. Turn ON electric and gas supply to furnace.
3. Adjust thermostat or ductstat so that call for heat exists.
4. Observe for complete sequencing of safety pilot and ignition (refer to **Table 17**).

OPERATION—CONTINUED

Startup—Continued

Table 17. Sequence of Operation		
Step	Action	Observe
1	Set thermostat at its lowest setting	
2	Turn ON electric and main and manual gas valves	
3	Set thermostat at desired setting—thermostat calls for heat	Venter motor is energized after 15-second (approximate) time delay
		Venter flow switches from NC to NO contacts to energize pilot gas valve and spark gap to produce pilot flame on each operating cycle
		Sensing probe proves presence of pilot flame and energizes safety switch portion of control to de-energize spark gap and energize main valve
		Main gas ignites and unit fires at full rate
4	If flame is extinguished during main burner operation, safety switch closes main valve and recycles spark gap	On unit equipped with controller with lockout, if pilot is not established within 120 seconds (approximately), unit locks out for 1 hour unless reset by interrupting power to control circuit
		Blower motor operates from fan time delay
5	Thermostat is satisfied	Solenoid gas valve, pilot gas valve, and ignition controller de-energized
		Time delay relay keeps venter motor on for approximately 90 seconds (post-purge)
6	To shut down, set thermostat to lowest setting	Blower motor remains on as determined by fan time delay

Post-Startup Checklist

- ☐ Observe burner flame at full fire. Natural gas flame should be about 1-1/2 inches in height with blue coloring. Propane gas flame should be approximately same height with blue coloring. Yellow tipping may appear on propane gas. If yellow extends beyond 1/2- to 3/4-inch, adjust air shutters (refer to [Burner Air Shutter Adjustment](#) section). If shutter adjustment does not reduce yellowing, check for gas leaks at control manifold or orifice fitting.
- ☐ Turn unit OFF and ON, pausing 2 minutes between each cycle. Observe to verify smooth ignition. On two-stage or modulating burner systems, manipulate temperature adjustment slowly up and down to see if control is sequencing or modulating properly. Raising temperature setting drives burner on or to full fire.
- ☐ Using manometer or slant gauge readable up to 14 IN WC, check orifice manifold for operating pressure on full fire. Natural gas should be 3.5 IN WC at this point. Propane gas should be 10 IN WC at this point. Variations from these pressures are not recommended as ignition and efficiency performance can be adversely affected by improper pressure adjustment (refer to [Measure and Adjust Manifold \(Outlet\) Gas Pressure](#) section).

Post-Startup Checklist—Continued

- ☐ If system is equipped with optional dirty filter switch, refer to [Dirty Filter Switch Adjustment](#) section for instructions to set switch.
- ☐ Place owner's envelope containing Limited Warranty Card, this manual, and any optional information in accessible location near heater. Follow instructions on envelope.

⚠ DANGER ⚠

- **The gas burner in this gas-fired equipment is designed and equipped to provide safe, controlled, complete combustion. However, if the installation does not permit the burner to receive the proper supply of combustion air, complete combustion may not occur. The result is incomplete combustion, which produces carbon monoxide, a poisonous gas that can cause death.**
- **Combustion air at the burner should be regulated only by manufacturer-provided equipment. NEVER RESTRICT OR OTHERWISE ALTER THE SUPPLY OF COMBUSTION AIR TO ANY HEATER. CHECK THE COMBUSTION AIR/VENT SYSTEM FOR SOUNDNESS AND FUNCTION AND MAINTAIN IT IN PROPER OPERATING CONDITION.**

ADJUSTMENTS

Belts, Blowers, and Drives

Checking and Adjusting Belt Tension

- Proper belt tension is important to the long life of the belt and motor. A loose belt will cause wear and slippage. Too much tension will cause excessive motor and blower bearing wear. Check belt tension as shown in [Figure 22](#).
- If the belt cannot be depressed 3/4 inches (19 mm), as shown in [Figure 22](#), adjust the belt tension as follows:
 - a. Ensure that belt is aligned in pulley grooves properly and is not angled from pulley to pulley.
 - b. Loosen adjusting screw locknut on motor base and turn adjusting screw until belt can be depressed 3/4 inches (19 mm).
 - c. When correct belt tension is achieved, retighten adjusting screw locknut.

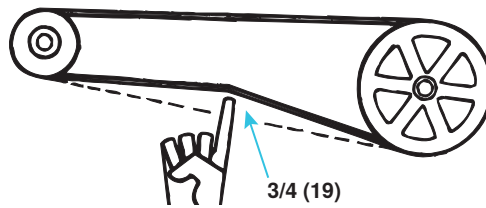


Figure 22. Checking Belt Tension

Adjusting Blower Speed

- Blower speed may be adjusted to achieve the desired outlet temperature as long as the adjustment is within the temperature rise and static pressure limits shown on the furnace rating plate. Motors are factory-set between maximum and minimum blower speeds.
- If the duct resistance is low, the blower may deliver too high an air volume. If the resistance is very low, the blower may deliver excess air to overload the motor, causing the overload protector to cycle the motor. Reducing the blower speed will correct these conditions. If ductwork is added to an installation, it may be necessary to increase the blower speed. Decreasing blower speed increases outlet temperature. Increasing blower speed decreases outlet temperature.
- The system is set at the factory for the RPM required to meet the CFM and external static pressure specified on the order. If estimated external static pressure is incorrect, or changes were made to the duct system, the blower RPM may have to be adjusted. Motors are equipped with adjustable pitch pulleys that permit adjustment of blower speed. Adjust the blower speed as follows:
 - a. Shut OFF gas and electric power.
 - b. Loosen belt tension and remove belt.
 - c. For units with <5-HP motor:
 - (1) Loosen setscrew on side of pulley away from motor.
 - (2) To increase blower speed and decrease outlet temperature, turn adjustable half of pulley inward. To decrease blower speed and increase outlet temperature, turn adjustable half of pulley outward. One turn of pulley changes speed 8–10%.
 - (3) Tighten setscrew on flat portion of pulley shaft.

ADJUSTMENTS—CONTINUED

Belts, Blowers, and Drives—Continued

Adjusting Blower Speed—Continued

- d. For units with ≥ 5 -HP motor:
 - (1) Loosen but do not remove two locking screws that are directly across from each other on outer locking ring.
 - (2) Adjust sheave to desired pitch diameter by turning outer locking ring. One complete turn of outer locking ring results in 0.233-inch change in pitch diameter. Increase diameter to decrease blower speed or decrease diameter to increase blower speed.

⚠ CAUTION ⚠

Sheaves should not be adjusted in either direction to the point where movable and stationary flanges are in contact.

- (3) After completing adjustment, tighten both locking screws on outer locking ring.
- e. Replace belt and adjust belt tension in accordance with [Checking and Adjusting Belt Tension](#) section.
- f. Turn ON gas and electric power and light heater in accordance with instructions on lighting instruction plate.
- g. Check motor amps using ammeter. Maximum motor amp rating on motor nameplate must not be exceeded.

NOTE: At final adjustment, amperes should not exceed the motor nameplate amp rating. The installation must be adjusted to obtain a temperature rise within the range specified on the furnace rating plate.

- h. When adjustment is complete, check for proper operation.

NOTE: Some blower pulleys require the use of a split taper bushing in the blower pulley. These split taper bushings must be loosened in order to remove the pulley.

- i. If it is necessary to remove a blower pulley, follow these instructions to loosen the bushing:
 - (1) Note that there are three capscrews in bushing and two holes without screws called push-off holes (see [Figure 23](#)). Remove three capscrews.
 - (2) Insert two capscrews into two push-off holes and tighten evenly until pulley is loosened.
 - (3) Pulley may now be removed from shaft.

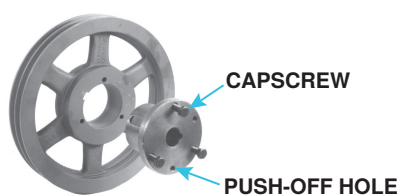


Figure 23. Split Taper Bushing

Reversing Blower Rotation

Each blower housing is marked for proper rotation. Rotation may be changed on single-phase motors by rewiring in the motor terminal box. Rotation may be changed on three-phase motors by interchanging two wires on the three-phase supply connections.

Motor Load and Amp Adjustment

- Amps may be adjusted downward by reducing blower RPM or by increasing duct system static pressure. Use an ammeter to check blower motor amps.
- See the motor rating plate for exact motor specifications. Do not exceed the amp rating on the motor nameplate.
- Venter motor amps for a 115V or 575V unit = 1.5A. Venter motor amps for a 208V, 230V, or 460V unit = 0.8A.
- Table 18**, which lists the Full Load Amps (FLA) of blower motors (open) based on Horsepower (HP) and Voltage (V), can be used for sizing line wiring but should not be interpreted as the exact motor amps.

Table 18. FLA of Blower Motors (Open, Single-Speed, Average Values)									
Voltage/Phase	HP								
	1	1-1/2	2	3	5	7-1/2	10	15	20
	FLA								
208/1	7.2	10.1	11.3	13.7	28.0	—			
230/1	6.5	9.1	10.2	12.4	26.0	32.0	38.0	—	
208/3	3.6	5.8	7.3	9.3	14.6	23.2	28.8	42.0	55.3
230/3	3.2	5.2	6.6	8.4	13.2	21.0	26.0	38.0	50.0
460/3	1.6	2.6	3.3	4.2	6.6	10.5	13.0	19.0	25.0
575/3	1.3	2.1	2.6	3.4	5.3	8.4	10.4	15.2	20.0

Adjust Heat Stage Controllers (Option AG41 or AG42)

NOTE: Unit sizes 500, 600, and 800 with two furnace sections have two heat stage controllers. Unit size 1200 with three furnace sections has four heat stage controllers.

Units with option AG41 and AG42 have heat stage controllers that control operation of the two-stage furnace based on outside air temperature setpoints. Proper setpoints are important to ensure that the modulating furnace (**Heat Stage 1**) is always in control and avoids cycling. The proper setpoint for each controller must be determined from basic design information as follows:

1. Calculate controller settings:

- For **Heat Stage 2** and **Heat Stage 3** in system with two furnace sections, use following formulas in which T_{SP} = setpoints of heat stage controllers (T_{SP2} and T_{SP3}), T_{SA} = desired supply air temperature, and T_D = design (minimum) entering air temperature:

$$\text{Setpoint for heat stage 2: } T_{SP2} = T_{SA} - 0.46 (T_{SA} - T_D)$$

$$\text{Setpoint for heat stage 3: } T_{SP3} = T_{SA} - 0.73 (T_{SA} - T_D)$$

EXAMPLE: With 3,600 CFM, power-vented, 100% outside air, -10°F outdoor winter design, and 75°F desired supply air:

$$T_{SP2} = 75 - [0.46 \times (75 - (-10))] = 75 - (0.46 \times 85) = 35.9$$

$$T_{SP3} = 75 - [0.73 \times (75 - (-10))] = 75 - (0.73 \times 85) = 12.9$$

Set Heat #2 controller to 36°F

Set Heat #3 controller to 13°F

ADJUSTMENTS—CONTINUED

Adjust Heat Stage Controllers (Option AG41 or AG42)—Continued

- b. For **Heat Stage 2**, **Heat Stage 3**, **Heat Stage 4**, and **Heat Stage 5** in system with three furnace sections, use the following formulas in which T_{SP} = setpoints of heat stage controllers (T_{SP2} , T_{SP3} , T_{SP4} , and T_{SP5}), T_{SA} = desired supply air temperature, and T_D = design (minimum) entering air temperature:

$$\text{Setpoint for heat stage 2: } T_{SP2} = T_{SA} - 0.30 (T_{SA} - T_D)$$

$$\text{Setpoint for heat stage 3: } T_{SP3} = T_{SA} - 0.49 (T_{SA} - T_D)$$

$$\text{Setpoint for heat stage 4: } T_{SP4} = T_{SA} - 0.65 (T_{SA} - T_D)$$

$$\text{Setpoint for heat stage 5: } T_{SP5} = T_{SA} - 0.82 (T_{SA} - T_D)$$

EXAMPLE: With 8,850 CFM, power-vented, 100% outside air, -10°F outdoor winter design, and 75°F desired supply air:

$$T_{SP2} = 75 - [0.30 \times (75 - (-10))] = 75 - (0.30 \times 85) = 49.5$$

$$T_{SP3} = 75 - [0.49 \times (75 - (-10))] = 75 - (0.49 \times 85) = 33.3$$

$$T_{SP4} = 75 - [0.65 \times (75 - (-10))] = 75 - (0.65 \times 85) = 19.8$$

$$T_{SP5} = 75 - [0.82 \times (75 - (-10))] = 75 - (0.82 \times 85) = 5.3$$

Set Heat #2 controller to 49°F

Set Heat #3 controller to 33°F

Set Heat #4 controller to 20°F

Set Heat #5 controller to 5°F

2. Locate heat stage controllers marked **Heat #2** and **Heat #3** (for two furnaces) or **Heat #2**, **Heat #3**, **Heat #4**, and **Heat #5** (for three furnaces) in inlet air section.

NOTE: The same type of controller may also be used as the optional high ambient limit control (option BN2) and as the mixed air controller that is part of air control options AR12, AR13, AR15, and AR16.

3. Adjust each controller to setpoint as determined by calculation in step 1.

Pressure Null Switch Adjustment

NOTE: IMPORTANT: To eliminate shipping damage to the pressure null switch contacts, the manufacturer reduced the span adjustment to zero before shipping.

The span should be adjusted prior to using the pressure null switch (see [Figure 24](#)) as follows:

1. If switch has been installed, disconnect vent tube so that switch is in neutral position.
2. Remove electrical box cover and, while observing contacts, turn span adjustment screw slowly in clockwise direction.
3. Continue turning adjustment screw until you are able to see gaps between common and both low and high contacts—minimum gap provides greatest sensitivity—wider gap provides lower sensitivity. HIGH actuation point of switch is indicated on calibrated scale secured to transparent range screw enclosure. Building pressure is set by turning adjustment screw. LOW actuation point is set by adjusting span of null by turning span adjustment screw. Span range is 0.01 to 0.03 IN WC.

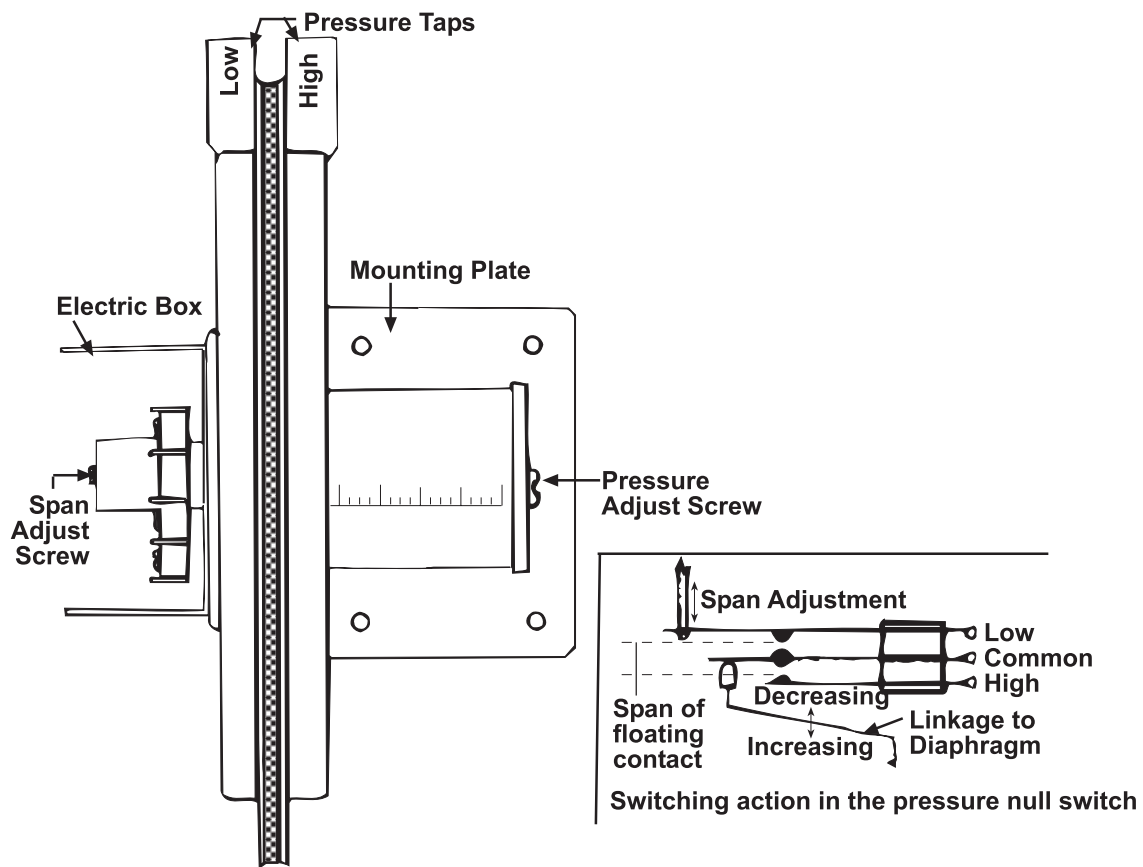


Figure 24. Pressure Null Switch Adjustment

Damper Linkage Adjustment

When units are equipped with dampers, the dampers are closed during shipment. When there are both return air and outside air dampers, the return damper linkage (see [Figure 25](#)) must be adjusted prior to use as follows:

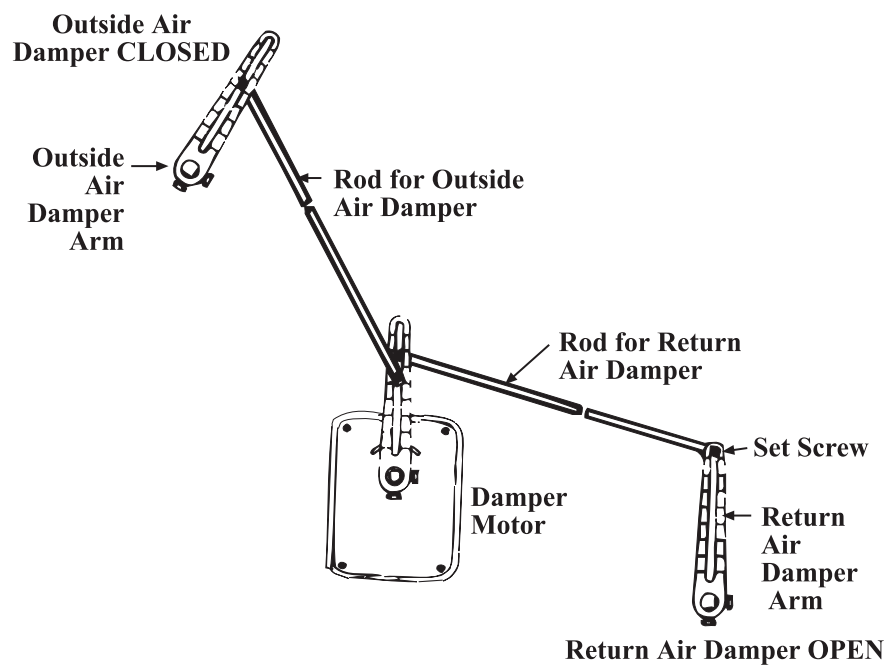


Figure 25. Damper Linkage

ADJUSTMENTS—CONTINUED

Damper Linkage Adjustment—Continued

1. Loosen setscrew on return air damper rod at damper arm.
2. Manually open return air dampers. While dampers are opening, damper rod and arm will automatically move to their correct positions.
3. Tighten setscrew.

Dirty Filter Switch Adjustment

After the unit is started but before continuous operation, the dirty filter switch must be set as follows:

1. With clean filters in place, blower doors closed, and blower operating, decrease pressure setting by adjusting setscrew on switch (see **Figure 26**) clockwise until indicator light is energized or setscrew is bottomed out.
2. At that point, adjust setscrew three full turns counterclockwise or until setscrew is top-ended.
3. At that setpoint, indicator light will be activated at approximately 50% filter blockage.

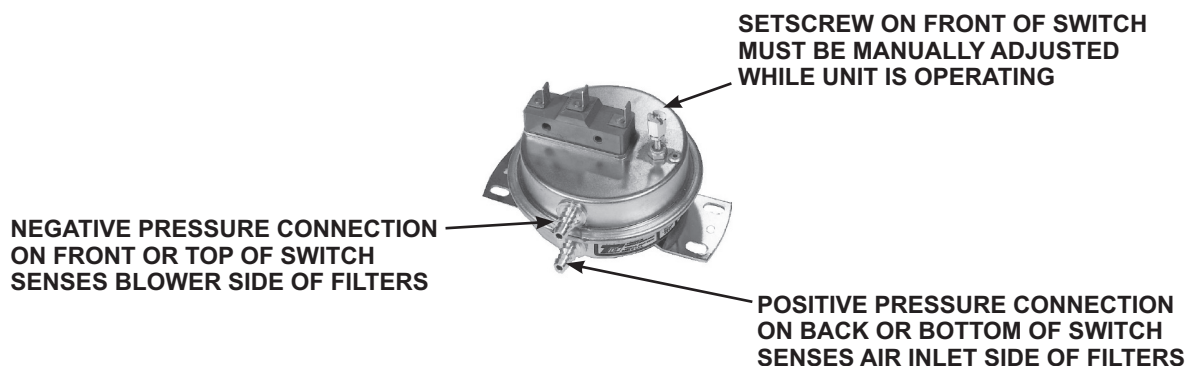


Figure 26. Dirty Filter Switch

Measure and Adjust Manifold (Outlet) Gas Pressure

NOTE: Always check the rating plate for minimum gas supply pressure.

Measuring manifold gas pressure cannot be done until the heater is in operation. Requirements vary based on size of burner and the gas control option. Most units require a minimum of 5 IN WC natural gas as stated above, but sizes 400, 700, 800, 1050, and 1200 with electronic modulation require a minimum of 6 IN WC natural gas supply pressure.

- **For natural gas:** When the heater leaves the factory, the combination valve is set so that the outlet gas pressure of a single-stage valve or high fire of a two-stage valve is regulated to 3.5 IN WC. Low fire on a two-stage valve is set to 1.8 IN WC. Inlet supply pressure to the valve must be a minimum of 5 IN WC or as noted on the rating plate and a maximum of 14 IN WC.
- **For propane gas:** When the heater leaves the factory, the combination valve is set so that the outlet gas pressure of a single-stage valve or high fire of a two-stage valve is 10 IN WC. Low fire on a two-stage valve is set to 5 IN WC. Inlet pressure to the valve must be a minimum of 11 IN WC and a maximum of 14 IN WC.

⚠ WARNING ⚠

- **Manifold gas pressure must never exceed 3.5 IN WC for natural gas or 10 IN WC for propane gas.**
 - **Before attempting to measure or adjust manifold gas pressure, the inlet (supply) pressure must be within the specified range for the gas being used, both when the heater is in operation and when it is on standby. Incorrect inlet pressure could cause excessive manifold gas pressure immediately or at some future time.**
-

NOTE: A manometer (fluid-filled gauge) with an inches water column scale is recommended.

1. With manual valve (on combination valve) positioned to prevent flow to main burners, connect manometer to outlet pressure tap (see [Figure 27](#)) on valve.

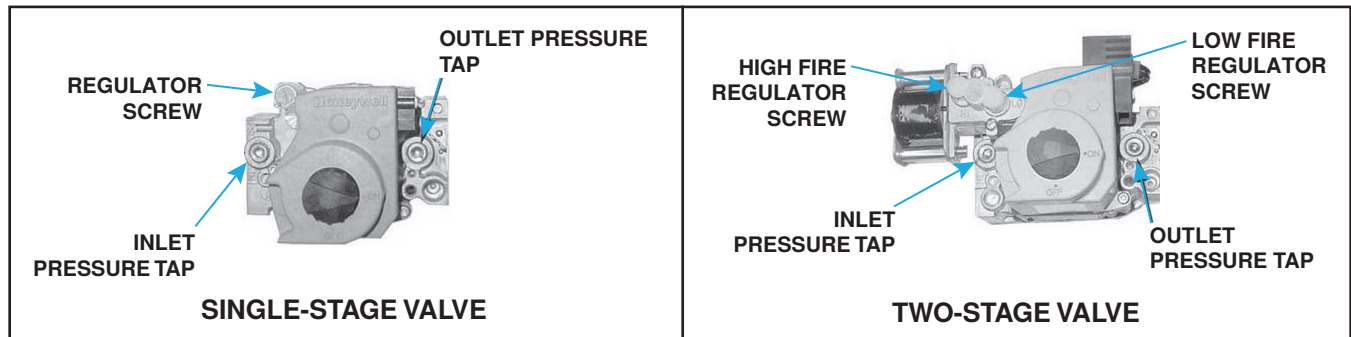


Figure 27. Combination Gas Valves

2. To measure low stage pressure on units equipped with two-stage valve, disconnect wire from HI terminal on valve. Open valve and operate heater and observe manometer reading. Be sure to reconnect wire.

⚠ CAUTION ⚠

DO NOT bottom out the gas valve regulator screw. This can result in excessive overfire and heat exchanger failure due to unregulated manifold pressure.

3. Normally, adjustments to factory-preset regulator should not be necessary. If adjustment is necessary, set pressure to correct settings by turning regulator screw (see [Figure 27](#)) IN (clockwise) to increase pressure or OUT (counterclockwise) to decrease pressure. Consult valve manufacturer's literature provided with furnace for more detailed information.
4. When manometer reading indicates that outlet pressure is correct, disconnect manometer and install cap(s) on regulator screw(s).

High-Elevation Conversion

NOTES:

- **High-elevation (>2,000 feet (>609 meters)) application with this unit depends on the installation elevation and the heating value of the gas. At high elevations, the heating value of natural gas is always lower than the heating value at sea level.**
 - **Deration is necessary to compensate for low atmospheric pressure at high elevations. Generally this will require obtaining the gas heating value from the local gas utility and replacing the burner orifices.**
-

For high-elevation (>2,000 feet (609 meters)) installations that require orifice replacement, replace the burner orifices as follows:

1. Determine model number and rated input (BTUh) from unit's rating plate.
2. Determine appropriate orifice replacement (refer to [Table 19](#)) for installation elevation.

ADJUSTMENTS—CONTINUED

Measure and Adjust Manifold (Outlet) Gas Pressure—Continued

High-Elevation Conversion—Continued

Table 19. Burner Orifices									
Installation Location	Installation Elevation (Feet (Meters))	Gas Type	Unit Size (MBTUh)						
			400	500	600	700	800	1050	1200
			PN, Drill Size (Quantity)*						
US, Canada	0–2001 (0–610)	NG	84437, #42 (16)	11833, #44 (12)	84437, #42 (12)	84437, #42 (14)	84437, #42 (16)	84437, #42 (14)	84437, #42 (16)
		LP	61652, 1.45 mm (16)	11830, #55 (12)	61652, 1.45 mm (12)	61652, 1.45 mm (14)	61652, 1.45 mm (16)	61652, 1.45 mm (14)	61652, 1.45 mm (16)
US	2001–3000 (611–915)	NG	84437, #42 (16)	38678, #45 (12)	84437, #42 (12)	84437, #42 (14)	84437, #42 (16)	84437, #42 (14)	84437, #42 (16)
		LP	11834, #54 (16)	11830, #55 (12)	11834, #54 (12)	11834, #54 (14)	11834, #54 (16)	11834, #54 (14)	11834, #54 (16)
Canada	2001–4500 (611–1373)	NG	11828, #43 (16)	38678, #45 (12)	11828, #43 (12)	11828, #43 (14)	11828, #43 (16)	11828, #43 (14)	11828, #43 (16)
		LP	11834, #54 (16)	11830, #55 (12)	11834, #54 (12)	11834, #54 (14)	11834, #54 (16)	11834, #54 (14)	11834, #54 (16)
US	3001–4000 (916–1220)	NG	11828, #43 (16)	38678, #45 (12)	11828, #43 (12)	11828, #43 (14)	11828, #43 (16)	11828, #43 (14)	11828, #43 (16)
		LP	11834, #54 (16)	11830, #55 (12)	11834, #54 (12)	11834, #54 (14)	11834, #54 (16)	11834, #54 (14)	11834, #54 (16)
	4001–5000 (1221–1525)	NG	11828, #43 (16)	38678, #45 (12)	11828, #43 (12)	11828, #43 (14)	11828, #43 (16)	11828, #43 (14)	11828, #43 (16)
		LP	11834, #54 (16)	11830, #55 (12)	11834, #54 (12)	11834, #54 (14)	11834, #54 (16)	11834, #54 (14)	11834, #54 (16)
	5001–6000 (1526–1830)	NG	11828, #43 (16)	16590, #46 (12)	11828, #43 (12)	11828, #43 (14)	11828, #43 (16)	11828, #43 (14)	11828, #43 (16)
		LP	97360, 1.35 mm (16)	39658, #56 (12)	97360, 1.35 mm (12)	97360, 1.35 mm (14)	97360, 1.35 mm (16)	97360, 1.35 mm (14)	97360, 1.35 mm (16)
	6001–7000 (1831–2135)	NG	11833, #44 (16)	84853, #47 (12)	11833, #44 (12)	11833, #44 (14)	11833, #44 (16)	11833, #44 (14)	11833, #44 (16)
		LP	97360, 1.35 mm (16)	39658, #56 (12)	97360, 1.35 mm (12)	97360, 1.35 mm (14)	97360, 1.35 mm (16)	97360, 1.35 mm (14)	97360, 1.35 mm (16)
	7001–8000 (2136–2440)	NG	11833, #44 (16)	84853, #47 (12)	11833, #44 (12)	11833, #44 (14)	11833, #44 (16)	11833, #44 (14)	11833, #44 (16)
		LP	11830, #55 (16)	39658, #56 (12)	11830, #55 (12)	11830, #55 (14)	11830, #55 (16)	11830, #55 (14)	11830, #55 (16)
	8001–9000 (2441–2745)	NG	38678, #45 (16)	40414, #48 (12)	38678, #45 (12)	38678, #45 (14)	38678, #45 (16)	38678, #45 (14)	38678, #45 (16)
		LP	11830, #55 (16)	39658, #56 (12)	11830, #55 (12)	11830, #55 (14)	11830, #55 (16)	11830, #55 (14)	11830, #55 (16)
	9001–10,000 (2746–3048)	NG	16590, #46 (16)	40414, #48 (12)	16590, #46 (12)	16590, #46 (14)	16590, #46 (16)	38678, #45 (14)	38678, #45 (16)
		LP	11830, #55 (16)	39658, #56 (12)	11830, #55 (12)	11830, #55 (14)	11830, #55 (16)	11830, #55 (14)	11830, #55 (16)

*Quantity listed is per duct furnace.

3. Unthread existing burner orifices from gas manifold.

⚠ DANGER ⚠

- **DO NOT use pipe tape or sealant (pipe dope or joint compound) on orifice threads because the hole in the orifice may become blocked and may cause fire, explosion, property damage, carbon monoxide poisoning, personal injury, or death.**
- **DO NOT attempt to drill out orifices in the field. Use only factory-supplied orifices. Improperly drilled orifices may cause fire, explosion, carbon monoxide poisoning, personal injury, or death.**

4. Thread replacement burner orifices into gas manifold—to prevent cross-threading, hand-tighten orifices into gas manifold until snug and then tighten one-and-one-half to two turns using wrench.

⚠ DANGER ⚠

DO NOT use an open flame to check for gas leaks.

5. Check all connections for gas leaks using commercial leak-detecting fluid or rich soap and water solution. Leaks are indicated by presence of bubbles. If leak is detected, tighten connection. If leak cannot be stopped by tightening connection, replace part(s).

Gas Conversion

⚠ DANGER ⚠

Gas conversion must be performed by qualified service personnel using a factory-supplied conversion kit. Failure to use the proper conversion kit can cause fire, explosion, property damage, carbon monoxide poisoning, personal injury, or death.

If gas conversion (natural gas to propane or propane to natural gas) is required, convert the unit in accordance with the gas conversion manual found at www.reznorhvac.com. When conversion is complete, verify that the input rate is correct.

Burner Air Shutter Adjustment

⚠ DANGER ⚠

Failure to adjust air shutters according to directions could cause property damage, personal injury, and/or death.

NOTE: Air shutters are required on propane gas units but are optional on natural gas units.

1. Operate heater for about 15 minutes with air shutters open.

NOTE: When making the adjustment, close the air shutters no more than is necessary to eliminate the problem condition.

2. Turn slotted screw that moves air shutters and adjusts all burners simultaneously on end manifold bracket—clockwise to open shutters or counterclockwise to close shutters. Close air shutters and observe flame for yellow-tipping.

NOTE: A limited amount of yellow-tipping is permissible for liquefied petroleum gases. Natural gas should not display any yellow-tipping.

3. Open air shutters until yellow disappears.

MAINTENANCE

WARNING

If you turn OFF the power supply, turn OFF the gas.

CAUTION

When cleaning, wearing eye protection is recommended.

NOTE: Use only factory-authorized replacement parts.

This unit will operate with a minimum of maintenance. To ensure long life and satisfactory performance, a furnace that is operating under normal conditions should be inspected every 4 months. If the furnace is operating in an area where an unusual amount of dust, soot, or other impurities are present in the air, more frequent inspection is recommended.

Service Checklist

The following section is designed to aid a qualified service person in maintaining and servicing this equipment. At a minimum, perform the following annually:

- ☐ Inspect filters and clean or replace as necessary.
- ☐ Inspect blower and belt—check belt for tension, wear, and alignment (adjust or replace as needed) and clean dirt from blower and motor.
- ☐ Check gas valve to ensure that gas flow is being shut off completely.
- ☐ Clean heat exchanger both internally and externally.
- ☐ Check pilot burner and main burners for scale, dust, or lint accumulation and clean as necessary.
- ☐ Clean all dirt and grease from primary and secondary combustion air openings.
- ☐ Check flue products outlet and clean as necessary.
- ☐ Check vent cap in optional extended vent system and replace any parts that do not appear sound.
- ☐ Check vent/combustion air system, inspect all joints, and replace any parts that do not appear sound.
- ☐ Check main burner ports, carryover assemblies, and orifices for cleanliness.
- ☐ Check wiring for any damaged wire—replace damaged wiring (refer to [Electrical Connections](#) section for wiring requirements)

Maintenance Procedures

Combination Gas Valve Maintenance

WARNING

The combination gas valve is the prime safety shutoff. To ensure positive closure, all gas supply lines must be free of dirt or scale before connecting them to the unit.

Inspect the combination gas valve, carefully remove any external dirt accumulation, and check wiring connections. Check the valve annually to ensure that the valve is shutting off gas flow completely as follows:

1. Close manual shutoff valve to prevent flow to combination gas valve.

NOTE: A manometer (fluid-filled gauge) with an inches water column scale is recommended.

2. Connect manometer to inlet pressure tap on combination gas valve(see [Figure 27](#)).
3. Observe manometer for 2 to 3 minutes—no gas pressure should be indicated.
 - a. If manometer indicates any gas pressure, manual shutoff valve must be replaced or repaired before combination gas valve can be checked.
 - b. If manometer does not indicate gas pressure, slowly open manual shutoff valve.
4. Close manual shutoff valve and observe manometer— no loss of gas pressure should be indicated. If loss of pressure is indicated, replace combination gas valve before furnace is restored to operation.

Burner Rack Maintenance

Remove, disassemble, clean, reassemble, and re-install burner rack as follows:

1. Remove burner rack:
 - a. Turn OFF gas and electric supply.
 - b. Remove control access side panel.
 - c. Disconnect any pilot lines and flame sensor leads.
 - d. Mark and disconnect electric valve leads.
 - e. Uncouple union in gas supply.
 - f. Remove sheet metal screws in top corners of burner rack assembly.
 - g. Pull drawer-type burner rack out of furnace.
2. Disassemble burner rack:
 - a. For natural gas burner rack, remove flash carryover system from manifold end of burner rack.
 - b. For propane gas burner rack:
 - (1) Break lighter tube connection at regulator and remove lighter tube orifice supply tubing.
 - (2) Remove retaining screws in drip shield and remove shield.
 - (3) Remove retaining screws and slide out lighter tube.
 - c. Pull main burners horizontally away from injection opening and lift out.
 - d. Remove manifold bracket screws and remove manifold.
 - e. Remove burner orifices.
 - f. Remove screws and lift out pilot burner.
3. Clean burner rack in accordance with instructions in [Cleaning Pilot and Burners](#) section.
4. Re-assemble and re-install burner rack by reversing above steps, being careful not to create any unsafe conditions.

Cleaning Pilot and Burners

⚠ WARNING ⚠

To prevent injury when cleaning pilot and burners, wearing eye protection is recommended.

⚠ CAUTION ⚠

To prevent damage to pilot orifice, do not ream the orifice.

MAINTENANCE—CONTINUED

Maintenance Procedures—Continued

Cleaning Pilot and Burners—Continued

If the pilot flame appears short and/or yellow, check the pilot orifice for blockage caused by lint or dust accumulation.

1. Remove the pilot orifice and clean it using compressed air.
2. Check and clean the aeration slot in the pilot burner.
3. Clean the metal sensing probe and the pilot hood with an emery cloth and wipe off the ceramic insulator.
4. Check the spark gap (see [Figure 28](#)), which should be maintained to 7/64 inch.

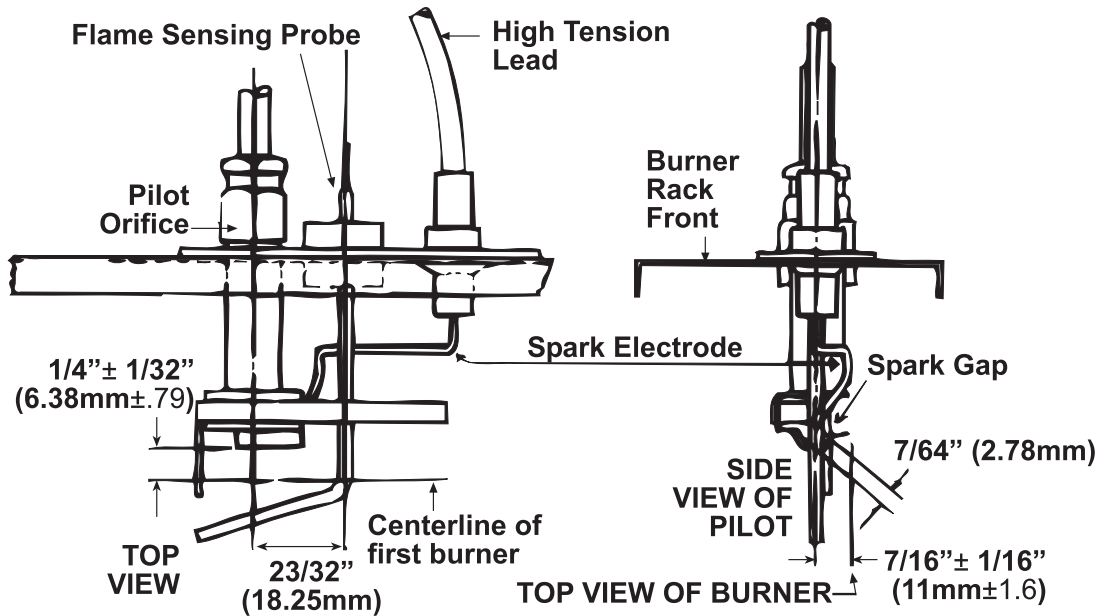


Figure 28. Pilot Assembly Spark Gap

5. After the pilot is cleaned, blow away any dirt using compressed air.
6. Clean the main burners and burner orifices using compressed air.

⚠ CAUTION ⚠

When cleaning burner ports, do not use anything that might change the port size.

7. Use an air nozzle to blow out scale and dust accumulation from the burner ports. Alternate blowing compressed air through the burner ports and then through the venturi. Use a fine wire to dislodge any stubborn particles from the burner ports.
8. Clean the burner rack carryover systems using compressed air.

Spark Ignition System Maintenance

⚠ WARNING ⚠

Due to high voltage on pilot spark wire and pilot electrode, do not touch when energized.

NOTE: When checking for spark with the pilot burner assembly removed from the burner rack, the pilot assembly must be grounded to the heater for proper spark.

1. If no spark occurs, check the following:
 - a. Using microammeter, measure voltage between terminals TH and 7 on ignition controller. Voltage should be at least 20V and no higher than 32V. Refer to **TROUBLESHOOTING** section if no voltage is observed.
 - b. Check for short to ground in high tension lead and/or ceramic insulator.
 - c. Verify that pilot spark gap (see **Figure 28**) is approximately 7/64 inch.
 - d. If the above conditions are normal and no spark occurs, replace the ignition controller.

NOTE: If replacing an earlier model of ignition controller (see **Figure 29**), order a replacement kit (PN 257472 for a unit with recycling gas control option AH2 or PN 257473 for a unit with gas control with lockout option AH3). Option codes are listed on the unit wiring diagram.



RECYCLING IGNITION CONTROLLER
FOR GAS CONTROL OPTION AH2,
UTEC MODEL 1003-638A
(PN 257009): REPLACE WITH
REPLACEMENT KIT (PN 257472)



IGNITION CONTROLLER WITH
LOCKOUT FOR GAS CONTROL
OPTION AH3, UTEC MODEL 1003-514
(PN 257010): REPLACE WITH
REPLACEMENT KIT (PN 257473)

Figure 29. Obsolete Ignition Controllers

2. If the main gas valve fails to open with a normal full-size pilot flame established, check the following:
 - a. If voltage between black and brown leads on main gas valve is 20–32 VAC and there is no main gas flow with built-in manual valve in FULL OPEN position, main valve is defective.
 - b. If there is no voltage between black and brown leads on main gas valve, check for disconnected or shorted flame sensor lead or flame sensor probe.
3. If the above conditions are normal and main gas flow is still off, the ignition controller is probably defective. Do not attempt to service the ignition controller as it does not contain any replaceable components.

Blower Bearing Lubrication

⚠ CAUTION ⚠

If the blower is unused for more than 3 months, lubricate with new grease any bearing with a grease fitting prior to startup.

NOTE: If unusual environmental conditions exist—temperatures <32°F (<0°C) or >200°F (>93°C), moisture, or contaminants—or if unit is in continuous operation, more frequent service is required.

MAINTENANCE—CONTINUED

Maintenance Procedures—Continued

Blower Bearing Lubrication—Continued

The blower bearings on systems with a <10-HP motor (standard blower) are permanently-lubricated cartridge ball bearings that do not require greasing. The blower bearings on systems equipped with a 10- to 20-HP motor are pillow block ball bearings that are equipped with a grease fitting. These bearings should be lubricated twice a year with a high-temperature, moisture-resistant grease (type NLGI-1 or -2 standard grease is recommended). Be sure to clean the grease fitting before adding grease. Add grease with a handgun until a slight bead of grease forms at the seal. Be careful not to unseat the seal by over-lubricating.

Venter Motor Maintenance

Power venter motors are permanently lubricated. No oiling is required.

Cooling Coil Maintenance

The cooling coil cabinet is designed with easily-removable panels on both sides of the cabinet to provide access for inspection and cleaning. Inspect the coil during routine maintenance and whenever the filters are changed. Check the cooling coil for build up of debris and clean as required.

Heat Exchanger Cleaning

NOTE: For cleaning the inner surfaces of the heat exchanger, an air hose, a long (18- to 24-inch) stiff brush of 1/2-inch diameter or heavy wire with steel wool securely attached, a flashlight, and a mirror are needed.

1. Clean heat exchanger inner surfaces (combustion gas side):
 - a. Remove burner rack assembly in accordance with [Burner Rack Maintenance](#) section.
 - b. Clean inner surfaces using furnace brush or piece of heavy wire to which piece of steel wool is attached. Scrub tube walls to remove any accumulated dust, rust, and/or soot.
 - c. Install burner rack assembly in accordance with [Burner Rack Maintenance](#) section.
2. For unit size 400 only, clean heat exchanger outer surfaces (circulating air side):
 - a. Gain access by removing inspection panels in ductwork or remove ductwork.
 - b. For standard (not high CFM) furnaces, remove baffle screws (see [Figure 30](#)) and lift each airflow baffle slightly and slide forward. Remove all baffles from heat exchanger.

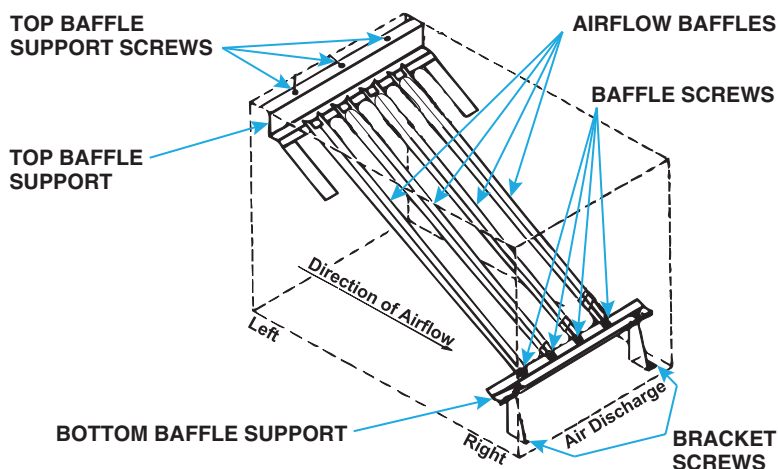


Figure 30. Airflow Baffles

- c. Remove accumulated dust and grease deposits from heat exchanger tubes and baffles using brush and/or air hose.
 - d. Reinstall airflow baffles removed in step 2b and secure using baffle screws.
 - e. Secure ductwork as necessary.
3. Check furnace for proper operation.

TROUBLESHOOTING

General Troubleshooting

Table 20. General Troubleshooting		
Symptom	Probable Cause	Remedy
A. Venter motor will not start	1. No power to furnace	Turn ON power and check supply fuses or circuit breaker
	2. No 24V power to venter relay	Turn up thermostat and check control transformer output Check for loose or improper wire connections
	3. Defective venter relay	Replace defective part
	4. Defective motor or capacitor	Replace defective part
B. Pilot will not light with venter operating	1. Manual valve not open	Open manual valve
	2. Air in gas line	Bleed gas line
	3. Dirt in pilot orifice	Remove pilot orifice and clean with compressed air or solvent
	4. Gas pressure too high or too low	Adjust gas pressure (refer to Measure and Adjust Manifold (Outlet) Gas Pressure section)
	5. Kinked pilot tubing	Replace tubing
	6. Pilot valve does not open	If 24V power is available at valve, replace valve
	7. No spark	
	a. Loose wire connections	Ensure that all wires connections are solid
	b. Transformer failure	Ensure that 24V power is available
	c. Incorrect spark gap	Maintain spark gap at 7/64 inch
	d. Spark cable shorted to ground	Replace worn or grounded spark cable
	e. Spark electrode shorted to ground	Replace pilot if ceramic spark electrode is cracked or grounded
	f. Drafts affecting pilot	Ensure that all panels are in place and are tightly secured to prevent drafts at pilot
	g. Ignition control not grounded	Ensure that ignition control is grounded to furnace chassis
	h. Faulty ignition controller	If 24V power is available to ignition controller and all other causes have been eliminated, replace ignition control
	8. Optional lockout device interrupting control circuit due to above causes	Reset lockout by interrupting control at thermostat
	9. Faulty combustion air proving switch	Replace combustion air proving switch

TROUBLESHOOTING—CONTINUED

General Troubleshooting—Continued


Table 20. General Troubleshooting—Continued		
Symptom	Probable Cause	Remedy
C. Pilot lights but main valve will not open	1. Manual valve not open	Open manual valve
	2. Main valve not operating	
	a. Defective valve	If 24V power is available at valve connections and valve remains closed, replace valve
	b. Loose wire connections	Check and tighten all wiring connections
	3. Ignition control does not power main valve	
	a. Loose wire connections	Check and tighten all wiring connections
	b. Flame sensor grounded, pilot lights, and spark continues	Ensure that flame sensor lead is not grounded and that insulation or ceramic is not cracked; replace as required
	c. Incorrect gas pressure	Adjust gas pressure (refer to Measure and Adjust Manifold (Outlet) Gas Pressure section)
	d. Cracked ceramic at sensor	Replace sensor
D. Insufficient heat with heater operating	e. Faulty ignition controller	If all checks listed in Spark Ignition System Maintenance section indicate no other cause, replace ignition controller (do not attempt to repair ignition controller, which has no field-replaceable parts)
	f. Poor microamp signal	Adjust pilot regulator
	1. Dirty filters in blower system	Clean or replace filters
	2. Incorrect manifold pressure	Check manifold pressure (refer to Measure and Adjust Manifold (Outlet) Gas Pressure section)
	3. Limit control cycling on	Check air throughput
	4. Improper thermostat location or adjustment	Refer to thermostat manufacturer's instructions
	5. Belt slipping on blower	Adjust belt tension (refer to Checking and Adjusting Belt Tension section)
	6. Fan control improperly wired	Ensure that wiring connections are in accordance with wiring diagram
	7. Defective fan control	Replace fan control
E. Cold air at startup or during operation	8. Blower set for too low temperature rise	Decrease blower speed (refer to Adjusting Blower Speed section) or increase static pressure
	1. Fan control improperly wired	Ensure that wiring connections are in accordance with wiring diagram
	2. Defective fan control	Replace fan control
	3. Incorrect manifold pressure	Check manifold pressure (refer to Measure and Adjust Manifold (Outlet) Gas Pressure section)
F. Motor will not run	4. Blower set for too low temperature rise	Decrease blower speed (refer to Adjusting Blower Speed section) or increase static pressure
	1. Circuit open	Check wiring and connections
	2. Inoperative fan control	Replace fan control
	3. Fan control improperly wired	Ensure that wiring connections are in accordance with wiring diagram
	4. Inoperative contactor	Replace contactor
G. Motor turns ON and OFF while burner is operating	5. Defective motor	Replace motor
	1. Fan control heater element improperly wired	Ensure that wiring connections are in accordance with wiring diagram
	2. Defective fan control	Replace fan control
	3. Motor overload device cycling	Verify motor load against motor rating plate Replace motor or overload device
H. Motor cuts out on overload	4. Three-phase motor rotating in opposite direction	Interchange two legs of supply connections
	1. Improper motor pulley adjustment	Ensure that motor pulley is properly-adjusted (refer to Adjusting Blower Speed section)
	2. Improper static pressure on duct system	Adjust dampers in duct system
	3. Low voltage	Check power supply

Troubleshooting Bypass Combustion Air Damper Safety Circuit on Units with Option AG39, AG40, AG41, or AG42

General Instructions: For each step, check to ensure that the wiring is not defective and that the wiring connections are secure.

Symptom - Part 1:

Main burners are inoperative.
Assumes that 24 volts is available between Terminal 2 and Terminal 7.

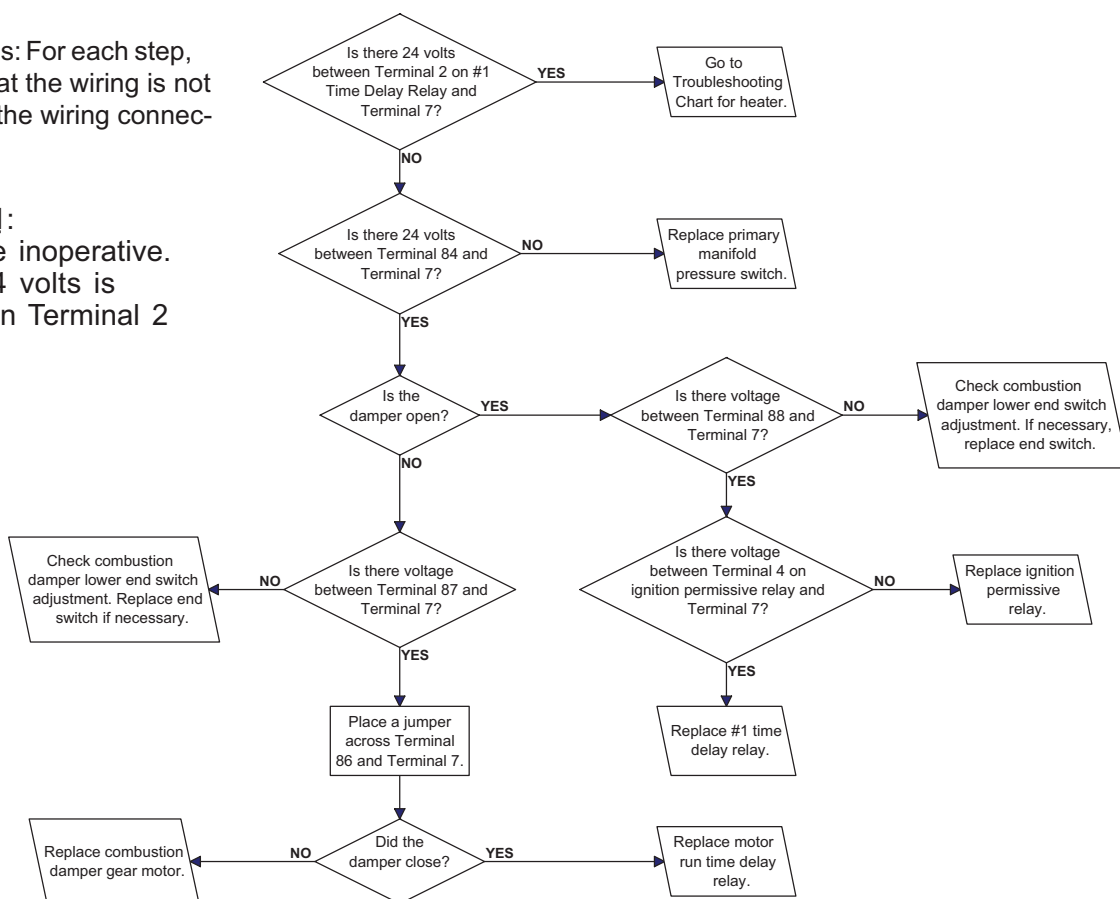

Symptom - Part 2:

Steady call for heat - burner cycles.

Assumes that 24 volts is available between Terminals 11 and 7 and Terminals 2 and 7.

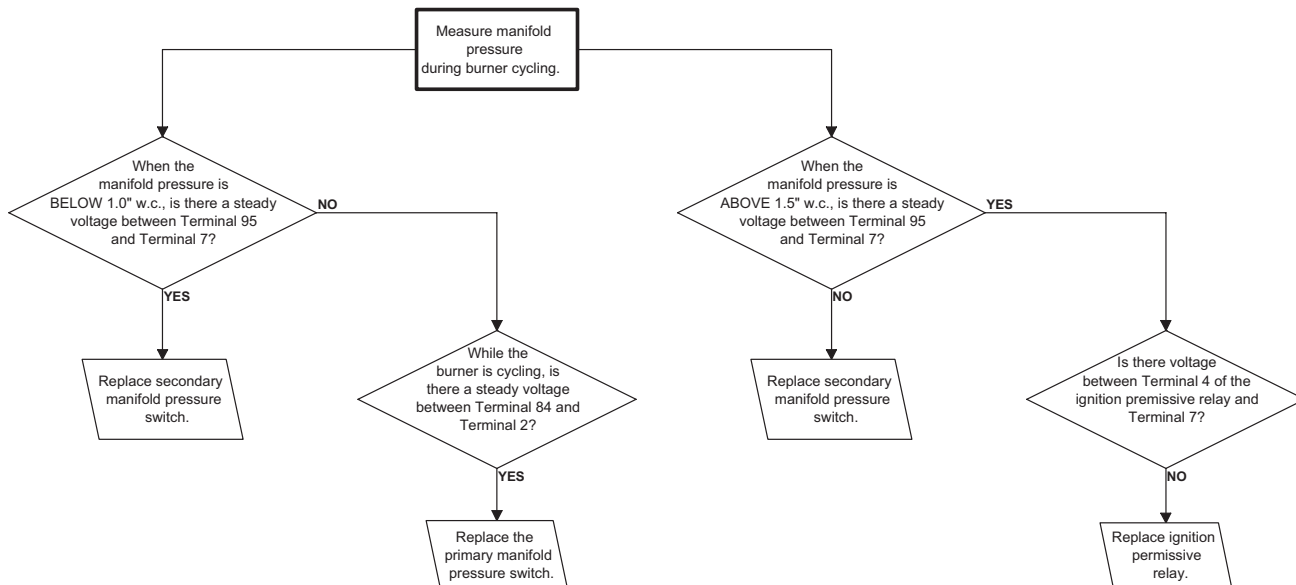


Figure 31. Troubleshooting Guide for Checking Bypass Combustion Air Damper Safety Circuit on Units with Option AG39, AG40, AG41, or AG42

NOTES

NOTES

INSTALLATION RECORD (TO BE COMPLETED BY INSTALLER)

Model	Serial No.	Date of Installation	Notes
	Installer	Distributor	
Name			
Company			
Address			
Phone No.			

For more information on Reznor HVAC products:

- **Contact your local Reznor representative at 1-800-695-1901**
- **Refer to the technical specifications, manuals, and consumer materials found at www.reznorhvac.com**

